



MAGNUM


Operating Instructions (EN)

MODELS:

26" DISK
28" DISK
30" DISK
34" DISK

24" CYLINDRICAL
27" CYLINDRICAL
30" CYLINDRICAL
34" CYLINDRICAL

28" EDGE
32" EDGE

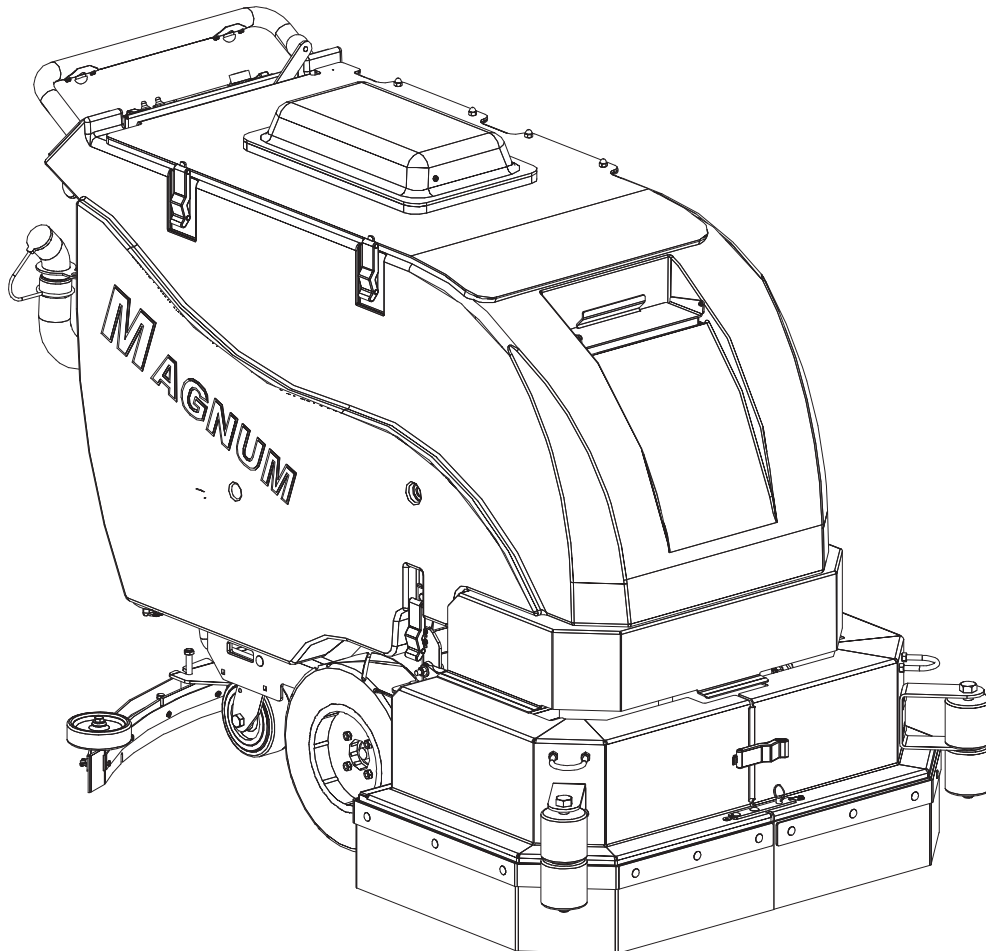

Read these Instructions before using the machine.



Read these Safety Messages before using the machine.

INTRODUCTION

This manual is furnished with each new machine. This manual will allow the Operator to get the best performance out of your RPS manufactured Scrubber-Drier, Sweeper, Burnisher, or Orbital Scrubber. Read this manual thoroughly before operating or servicing the machine.

This machine will provide excellent performance, but the best results will be obtained at the most minimum costs if:

- The machine is regularly maintained - per the machine Preventative Maintenance instructions provided.
- The machine is operated with reasonable care and caution.
- The machine is maintained with manufacturer supplied parts.

ABOUT THIS MANUAL

TABLE OF CONTENTS: Tells you where to look in the manual.

SAFETY MESSAGES: Section contains important information regarding hazard or unsafe practices of the machine. Levels of hazards are identified that could result in product or personal injury, or severe injury resulting in death.

OPERATION CONTROLS / MACHINE COMPONENTS: Shows you the different machine controls and features.

MACHINE SETUP: Tells you how to setup machine from un-crating to installing squeegee and brushes.

MACHINE OPERATION: Section is to familiarize the operator with the operation and function of the machine.

BATTERY CHARGING: Shows you how to charge the batteries (on-board and off board charging).

MAINTENANCE: This section contains preventative maintenance to keep the machine and it's components in good working condition. They are listed in this general order:

- Batteries
- Scrub Brushes
- Adjusting Squeegee
- Service Schedule
- Machine Trouble Shooting


TROUBLE SHOOTING: A list of common problems that may occur.

MACHINE SPECS: Tells you Machine Specifications for the various parts of the machine.

MACHINE INSTALL FORM: Should be filled out upon machine installation and faxed to 1-866-632-6961 or on-line at www.rpscoperation.com.

WARRANTY POLICY: Tells you coverage, exclusions and limitations to warranty.

NOTE: The serial number of your machine is located on the lower half of the control panel of the machine.

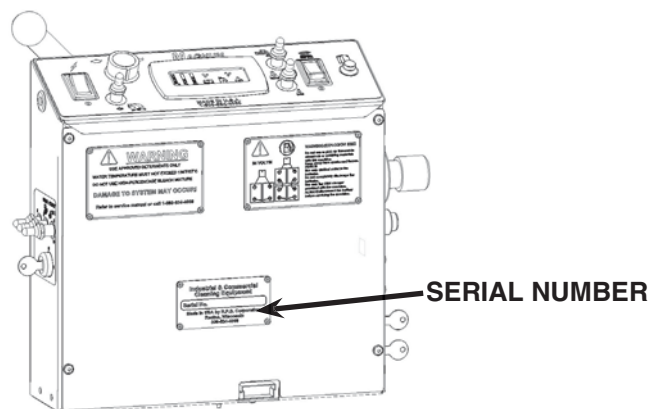

AS OUR POLICY IS ONE OF CONSTANT IMPROVEMENT - ALL INFORMATION AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

TABLE OF CONTENTS

| | |
|---|--|
| <p>Introduction..... 2</p> <p>About This Manual..... 2</p> <p>Table of Contents..... 3</p> <p>Safety Messages..... 4</p> <p>Safety Label Locations..... 6</p> <p>Operation Controls..... 7</p> <p>Operation Controls..... 8</p> <p>Machine Components..... 9</p> <p>Machine Components..... 10</p> <p>LCD Screen Menu Displays:..... 11</p> <p>Machine Setup..... 12</p> <p style="padding-left: 20px;">Un-Crating Machine:..... 12</p> <p style="padding-left: 20px;">Connecting Batteries:..... 12</p> <p style="padding-left: 20px;">Adjusting Squeegee:..... 13</p> <p style="padding-left: 20px;">Removing Squeegee:..... 13</p> <p style="padding-left: 20px;">Replacing or Rotating Squeegee Blades:..... 13</p> <p style="padding-left: 20px;">Installing Disk Pad Driver or Brush:..... 14</p> <p style="padding-left: 20px;">Installing Driver Pads:..... 14</p> <p style="padding-left: 20px;">Installing Cylindrical Brush:..... 15</p> <p style="padding-left: 20px;">Installing EDGE Pads:..... 16</p> <p style="padding-left: 20px;">Leveling EDGE Decks:..... 16</p> <p style="padding-left: 20px;">Leveling PROPOLISH Disk Decks:..... 17</p> <p style="padding-left: 20px;">Leveling Cylindrical Decks:..... 17</p> <p style="padding-left: 20px;">Side Broom System:..... 18</p> <p>Machine Operation..... 19</p> <p style="padding-left: 20px;">Pre-Cleaning Checklist:..... 19</p> <p style="padding-left: 20px;">Operating Hints:..... 19</p> <p style="padding-left: 20px;">One Pass Scrubbing:..... 20</p> <p style="padding-left: 20px;">Scrub Only:..... 20</p> <p style="padding-left: 20px;">Vacuum Only:..... 20</p> <p style="padding-left: 20px;">Adjust Solution Flow:..... 21</p> <p style="padding-left: 20px;">Adjust Curtains:..... 21</p> <p style="padding-left: 20px;">Adjust Wipers :..... 21</p> <p style="padding-left: 20px;">Draining Solution Tank:..... 21</p> <p style="padding-left: 20px;">Draining Recovery Tank:..... 21</p> <p style="padding-left: 20px;">Open Recovery Lid:..... 22</p> <p style="padding-left: 20px;">Flush Recovery Tank:..... 22</p> <p style="padding-left: 20px;">Clean “Drain Saver”:..... 22</p> | <p style="padding-left: 20px;">Clean Vacuum Screen:..... 22</p> <p style="padding-left: 20px;">Tip Tank:..... 23</p> <p style="padding-left: 20px;">Squeegee Up:..... 23</p> <p style="padding-left: 20px;">Squeegee Down:..... 23</p> <p style="padding-left: 20px;">Deck Height Adjustment:..... 24</p> <p style="padding-left: 20px;">Vacuum Motor:..... 24</p> <p style="padding-left: 20px;">Solution Filter:..... 24</p> <p style="padding-left: 20px;">Cleaning Solution Filter:..... 24</p> <p>Battery Charging..... 25</p> <p style="padding-left: 20px;">External Battery Charging:..... 25</p> <p>On-Board Charger..... 26</p> <p style="padding-left: 20px;">On-Board Battery Charging (Optional):..... 26</p> <p>Battery Maintenance Guide..... 27</p> <p style="padding-left: 20px;">Safety:..... 27</p> <p style="padding-left: 20px;">Inspection and Cleaning:..... 27</p> <p style="padding-left: 20px;">Storage:..... 27</p> <p style="padding-left: 20px;">Watering:..... 27</p> <p>Maintenance..... 28</p> <p style="padding-left: 20px;">Daily Maintenance:..... 28</p> <p style="padding-left: 20px;">Weekly Maintenance:..... 28</p> <p style="padding-left: 20px;">Monthly maintenance:..... 28</p> <p style="padding-left: 20px;">Yearly Maintenance:..... 28</p> <p style="padding-left: 20px;">Storing Machine:..... 28</p> <p style="padding-left: 20px;">Checking Battery Specific Gravity:..... 28</p> <p>PM Records..... 29</p> <p>Trouble-shooting..... 31</p> <p>Trouble-Shooting Central Command..... 33</p> <p>Machine Specs..... 35</p> <p>Common Wear Parts..... 36</p> <p style="padding-left: 20px;">Round Disk Brushes:..... 36</p> <p style="padding-left: 20px;">Round Disk Pads:..... 36</p> <p style="padding-left: 20px;">EDGE Pads and Screens:..... 36</p> <p style="padding-left: 20px;">New Style Cylindrical Brushes:..... 37</p> <p style="padding-left: 20px;">Old Style Cylindrical Brushes:..... 37</p> <p>Soap Choices..... 38</p> <p>Standard Warranty Policy..... 40</p> <p>Machine Install / Warranty Registration..... 41</p> |
|---|--|

SAFETY MESSAGES

You will see four kinds of safety reminders in this manual:

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury or damage to this machine or nearby objects. CAUTION also can be used to alert against unsafe practices.

NOTICE

NOTICE indicates information considered important, but not hazard-related. This safety message may be related to property damage or warranty warnings.

Your safety, and that of others, is very important. Operating this machine safely is an important responsibility.

DO NOT OPERATE THIS MACHINE UNLESS:

- You are trained and authorized to do so
- You have read and understood this Operator's Manual
- On surfaces with greater than a 2% grade unless this machine is equipped with a functional parking brake.

WHEN OPERATING THIS MACHINE:

- Remove loose objects from the floor that could be projected from the rotating Brushes
- Keep your hands and feet away from the rotating Brushes
- Do not operate this machine where flammable liquids are present
- Use caution when maneuvering

BEFORE LEAVING THE MACHINE:

- Park the machine on a level surface
- Turn the machine off

BEFORE SERVICING THE MACHINE:

- Disconnect the Batteries

DANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

DANGER

Flammable materials can cause an explosion or fire. Do not use flammable materials in Tank or pick up.

⚠ WARNING

The Batteries in this machine produce hazardous voltage which can cause electrical shock, burns and/or electrocution. Always disconnect Batteries before servicing this machine.

⚠ WARNING

When climbing or descending ramps, always drive machine forward. To avoid overturning the machine, Do not back down ramps. Do not drive across inclines. Do not turn while ascending or descending ramps. Overturning the machine can cause serious injury or death.

⚠ WARNING

Do not use water that exceeds 135°F / 57°C. If water is above said temperature, this will void the Tank Warranty.

⚠ WARNING

Do not park this machine on ramps or slopes. Always park this machine on a level, hard surface. Do not operate this machine outdoors or on uneven surfaces.

⚠ WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

⚠ WARNING

To avoid electrical shock, do not operate this machine over electrical floor outlets.

⚠ CAUTION

To avoid damage to this machine, use only cleaning solutions and replacement parts recommended by the manufacturer.

⚠ CAUTION

Do not operate this machine if any parts have been damaged or removed.

⚠ WARNING

Dress safely. Do not wear rings or metal wrist watches when servicing this machine, as they can cause an electrical short circuit which can cause serious burns.

⚠ WARNING

Do not remove, paint over or destroy warning decals. If warning decals become damaged, call 1-262-681-3583 for free replacements.

⚠ WARNING

Dress safely. Do not wear a neck tie, scarf, or any loose or dangling clothing while operating this machine. Loose or dangling clothing or neck-wear can tangle in rotating parts, causing serious injury or death.

⚠ WARNING

Always turn off this machine before leaving it unattended. Do not allow untrained persons to operate this machine.

⚠ WARNING

NO RIDERS. Do not carry passengers on this machine. Do not use this machine as a stepladder or work platform.

⚠ WARNING

Understand the dynamic braking system before you operate the machine on ramps. Machine may coast.

⚠ WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

⚠ CAUTION

Always use the automatic battery charger provided by the manufacturer of this machine to charge the Batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.


⚠ CAUTION

To avoid damage to the electronic control components of this machine, Do not store this machine outdoors. Do not pressure wash this machine.

SAFETY LABEL LOCATIONS

Read and obey all Safety Labels on your MAGNUM Floor Scrubber. If you have questions about these labels, ask your supervisor.

These images indicate where on the MAGNUM Safety Labels are located. If ever the labels become illegible, worn off, or torn, promptly report it to your supervisor and replace it.

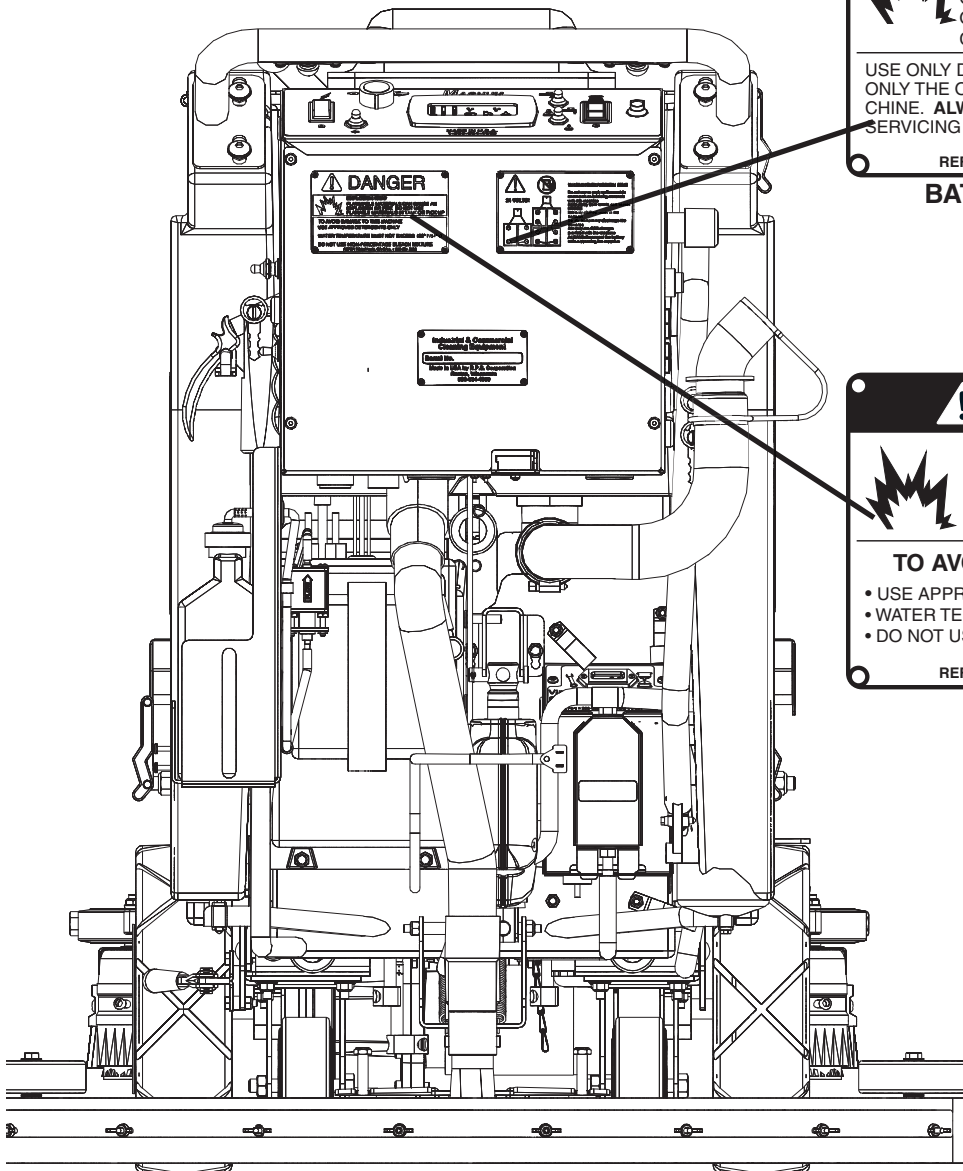

⚠ DANGER
EXPLOSION RISK!
EXPLOSIVE HYDROGEN GAS FORMS WHEN BATTERIES ARE CHARGING. AN OPEN FLAME OR SPARK CAN CAUSE THIS GAS TO EXPLODE. ONLY CHARGE THE BATTERIES IN THIS MACHINE IN A WELL VENTILATED AREA.

USE ONLY DISTILLED WATER IN THE BATTERIES. USE ONLY THE OEM CHARGER PROVIDED WITH THE MACHINE. **ALWAYS** DISCONNECT THE BATTERY BEFORE SERVICING THE MACHINE.

REFER TO MANUAL OR CALL +011-262-681-3583

BATTERY CHARGING LABEL
PART #: 253-7280

⚠ DANGER
EXPLOSION RISK!
FLAMMABLE MATERIALS CAN CAUSE AN EXPLOSION OR FIRE. DO NOT USE FLAMMABLE MATERIALS IN TANK OR PICK UP.


TO AVOID DAMAGE TO THIS MACHINE:

- USE APPROVED DETERGENTS ONLY
- WATER TEMPERATURE MUST NOT EXCEED 130°F/54°C
- DO NOT USE HIGH-PERCENTAGE BLEACH MIXTURE

REFER TO MANUAL OR CALL +011-262-681-3583

TANK LABEL
PART #: 5-728


OPERATION CONTROLS

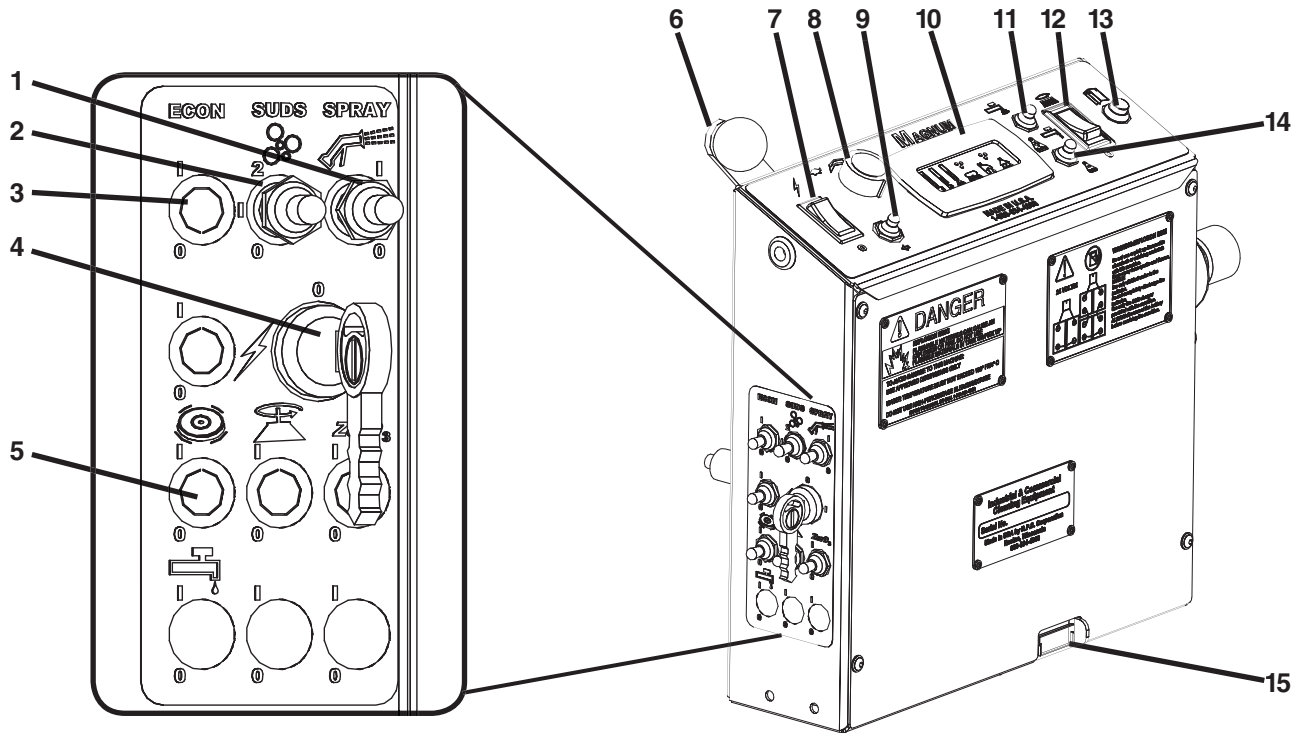



1. **SPRAY JET [BLUE] (OPTIONAL):** Activates Water Pump for remote Spray Wand
2. **“ON-BOARD” SOAP SYSTEM [GRAY] (OPTIONAL):** Dispenses soap directly to the Scrubdeck level
3. **ECON TOGGLE SWITCH [GREEN] (OPTIONAL):** Reduces power to give machine a longer run time
4. **KEY SWITCH:** Turns power of the machine *ON* and *OFF*
5. **LOAD TOGGLE SWITCH [ORANGE] (OPTIONAL):** Engages different Scrubdeck parameters for increased RPM for Stripping and Polishing
6. **SQUEEGEE LIFT LEVER:** Raises and lowers the Squeegee
7. **MAIN POWER SWITCH:** Turns power of the machine *ON* and *OFF*
8. **SPEED CONTROL KNOB:** Controls the speed of the Traction Drive - Turn counter-clockwise to reduce speed
9. **REVERSE SWITCH:** Pull back for machine drive reverse
10. **LCD SCREEN:** Lists functions and settings of the machine
11. **SOLUTION FLOW CONTROL TOGGLE [BLUE]:** Push down (-) to reduce and push up (+) to increase the solution flow
12. **SCRUBDECK SWITCH:** Raises and lowers the Scrubdeck
13. **MENU CONTROL:** Scrolls through different options on the LCD display - there are 3 different screens it will scroll through
14. **DOWN PRESSURE TOGGLE SWITCH [BLACK]:** Controls the pressure to the Scrubdeck - push up (+) for higher down pressure, down (-) for lower pressure
15. **CHARGER PORT:** Red 50 used to receive charger input for optional external charger

OPERATION CONTROLS


1. **EMERGENCY SHUT OFF SWITCH (OPTIONAL):** Shuts *OFF* the machine in case of an emergency
2. **HOUR METER:** Hour meter to indicate complete time machine has been *ON*
3. **RECHARGE CYCLE METER:** Shows the amount of charges on a machine
4. **MANAGER SOLUTION LOCKOUT (OPTIONAL):** Allows ability to set Solution Flow and then remove Key to not allow changing of parameters
5. **MANAGER DOWN PRESSURE LOCKOUT (OPTIONAL):** Allows ability to set Down Pressure and then remove Key to not allow changing of parameters

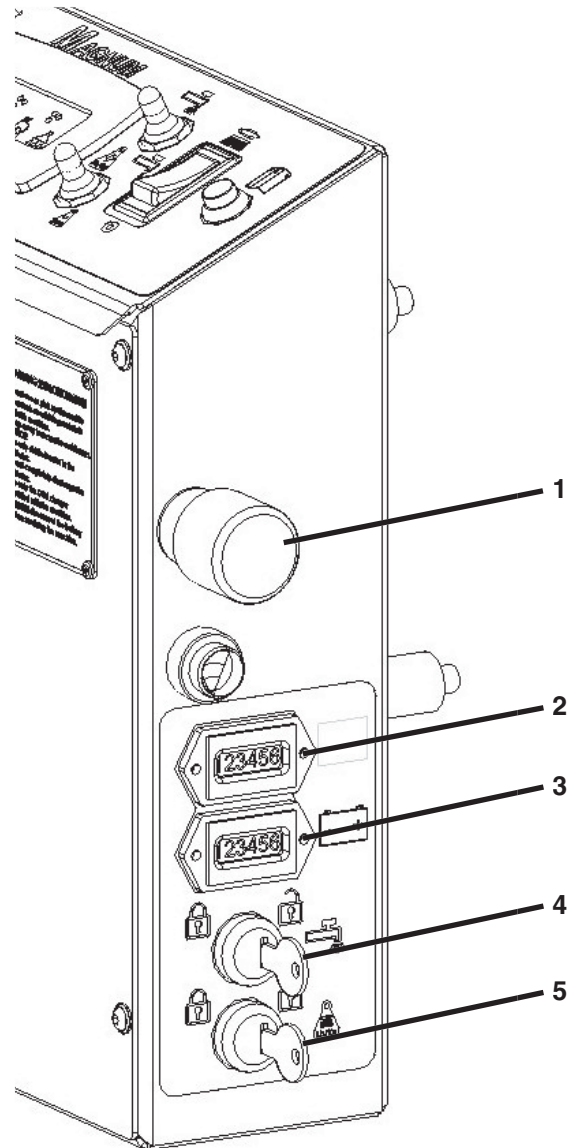


MACHINE COMPONENTS

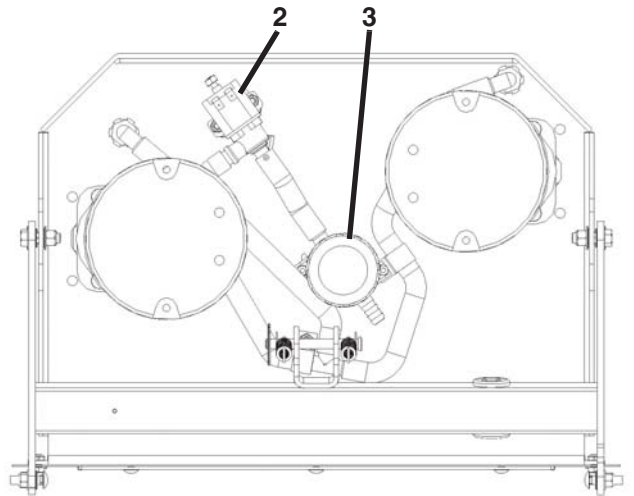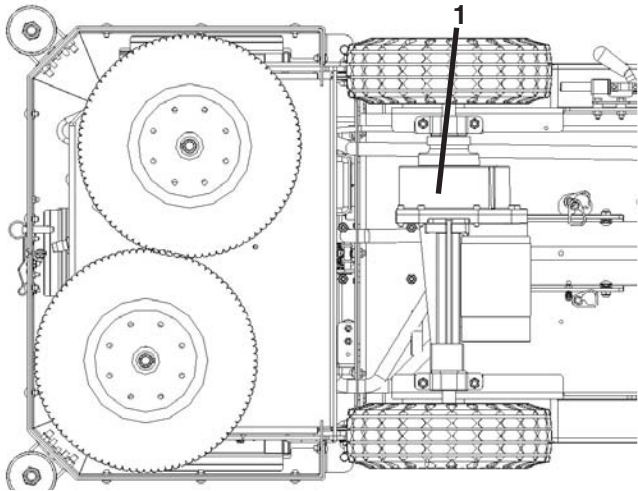

1. **TRACTION DRIVE:** Propels machine forward/backward
2. **SOLUTION FLOW VALVE:** Controls solution flow rate
3. **SOLUTION FILTER:** Filters water solution prior to scrubbing
4. **DRIVE BUTTON:** Depress to drive forward - release to stop (*This starts and stops the Drive Motor*)
5. **“DRAIN SAVER” STRAINER:** Helps prevent clogging of Drain Ports
6. **CLEAR COVER:** For viewing inside Recovery Tank area
7. **RECOVERY LID:** Used for flushing out Recovery Tank area with fresh water
8. **VAC SCREEN:** Protects Vacuum Motor from debris
9. **SOLUTION FILL LID:** Fill port for filling Solution Tank

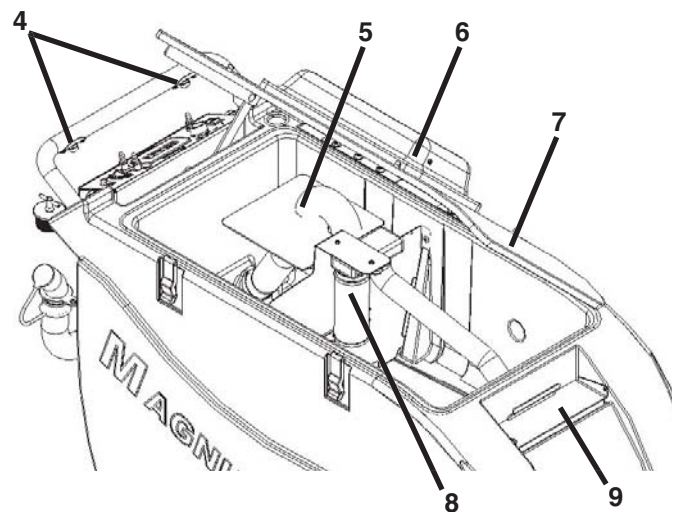


MACHINE COMPONENTS

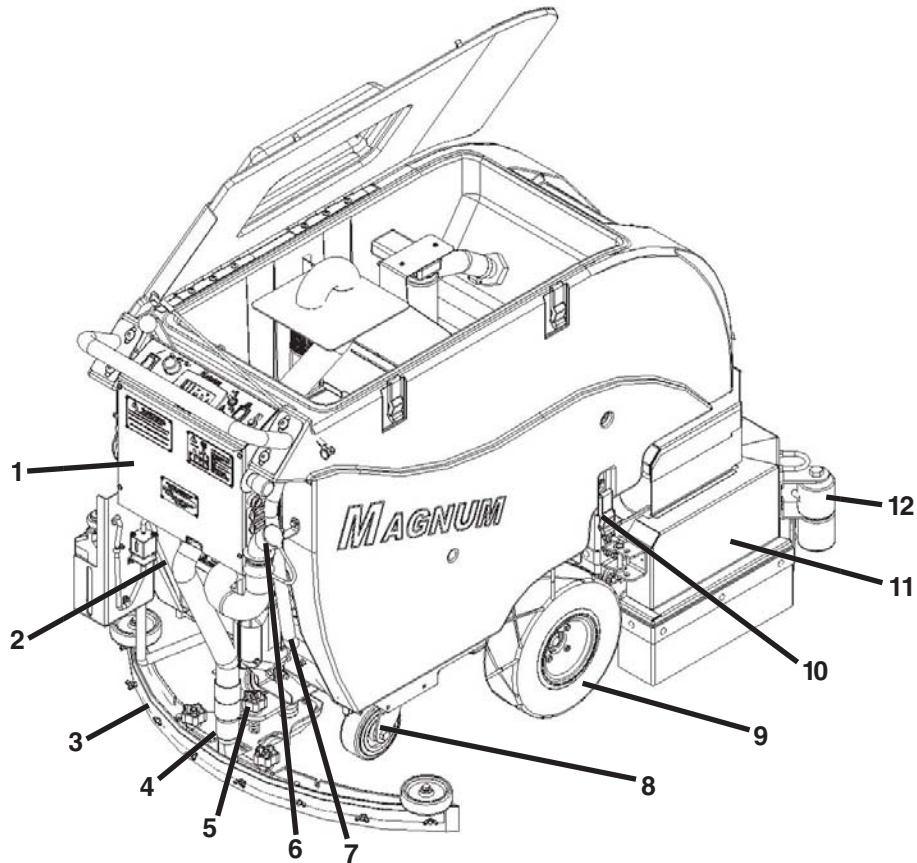


1. **CONTROL PANEL:** Machine controls and access to electrical components
2. **“ON-BOARD” BATTERY CHARGER:** Recharges Batteries
3. **SQUEEGEE BLADE:** Recovers dirty water from the floor to be recovered by Vacuum Hose
4. **VACUUM HOSE:** Creates vacuum for Squeegee (*NOTE: Keep free and clear of blockage*)
5. **SQUEEGEE PITCH ADJUSTMENT:** Adjusts pitch of Squeegee - Deflection should be even across entire Blade
6. **RECOVERY DRAIN HOSE:** Allows for controlled draining of the Recovery Tank
7. **SOLUTION SIGHT GAUGE & DRAIN TUBE:** Shows precise level of cleaning solution in Tank while also used as a Solution Tank drain hose
8. **REAR CASTERS:** Twin rear casters for stability
9. **MAIN TIRE:** Drive tire
10. **TANK LATCH:** Secures tank to frame
11. **JAWS:** Protects Scrubdeck from collision damage
12. **WALL ROLLERS:** Helps protect machine when scrubbing near walls

LCD SCREEN MENU DISPLAYS:


SCREEN #1 (OPERATOR)

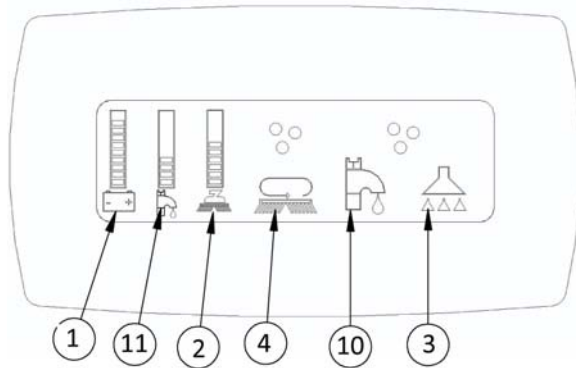

SCREEN #2 (MAINTENANCE)

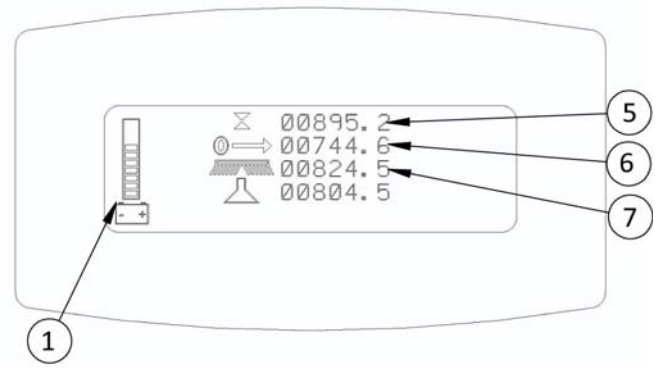

SCREEN #3 (WITH ERROR CODE)

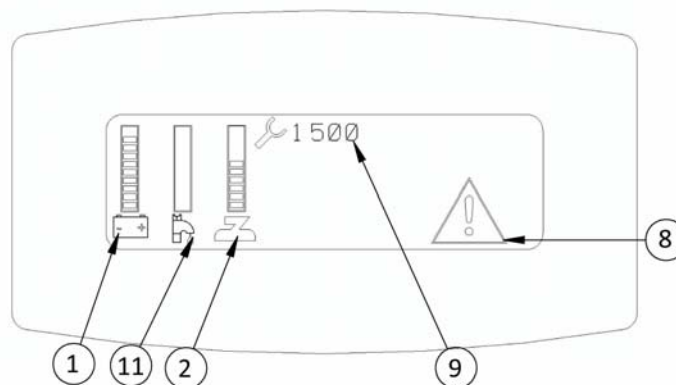

**** USE GREEN MENU SELECTION BUTTON ON CONTROL PANEL TO CHANGE SCREENS ****


1. **BATTERY LEVEL INDICATOR** - Indicates the energy level remaining in the batteries (*Shown on all menu displays*)
2. **SCRUBDECK DOWN PRESSURE GAUGE** - Sets the down pressure on the brushes
3. **VACUUM ON** - Indicates the vacuum is *ON*
4. **SCRUB MOTORS ON** - Indicates the brush motors are “running”
5. **KEY SWITCH HOUR METER** - Indicates the total number of hours that the machine has been *ON*
6. **SCRUB BRUSH HOUR METER** - Indicates the total number of hours that the brush motors have been used
7. **TRANSPORT HOUR METER** - Indicates the total number of hours the drive system has been used
8. **ERROR WARNING SYMBOL** - Indicates when there has been a diagnostic code error
9. **DIAGNOSTIC CODE** - When the machine has detected an error, it will display the warning symbol and a diagnostic code which tells you what’s wrong
10. **WATER ON** - Indicates the solution flow is *ON*
11. **SOLUTION LEVEL** - Indicates the gallons per minute (GPM) 0 - 1.0

MACHINE SETUP

UN-CRATING MACHINE:

Carefully check the crate for any signs of damage and that the batteries are in the unit.

To un-crate the machine, remove banding strips from around the crate. Take off the top and sides and dispose properly. Remove brackets from machine wheels. Remove bolts from pallet, then remove board. Carefully roll the machine off of the base. Notify the carrier immediately if concealed damage is discovered.

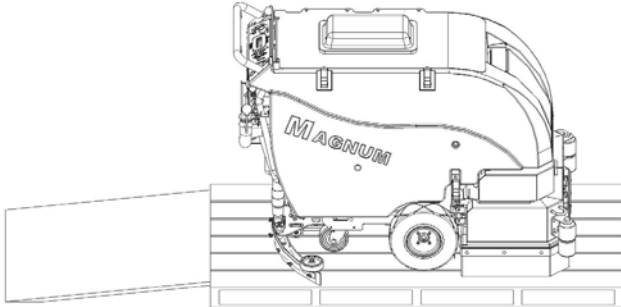

CONNECTING BATTERIES:

Your machine is equipped with (4x) 6-Volt/ 245 AH, (4x) 6-Volt/ 325 AH, (4x) 6-Volt/ 360 AH, or (4x) 6-Volt/ 360 AH Wet Lead Acid, AGM, or Deep Cycle Batteries which form a 24 Volt system.

(SEE PICTURE BELOW OR BATTERY DISCONNECT LABEL FOR CORRECT CABLE CONNECTIONS)


1. Turn all switches to the *OFF* position and remove Key (if machine is equipped with Optional Key Switch).
2. Attach all Battery Cables to Terminals as shown below.
3. Turn *ON* main power switch and check the battery condition meter to ensure correct installation. Charge Batteries if needed (**SEE BATTERY CHARGING**).

NOTICE

Batteries are a possible environmental hazard. Consult your Battery supplier for safe disposal methods.

NOTICE


Orientation of Batteries is critical for cables to reach.

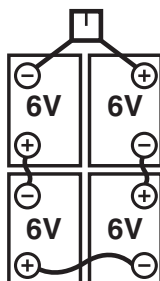


24 VOLTS

ATTACHING SQUEEGEE:


1. Lower the Squeegee Mounting Plate by rotating the Squeegee Lift Lever (**A**) in a clockwise motion (**SEE BELOW**).

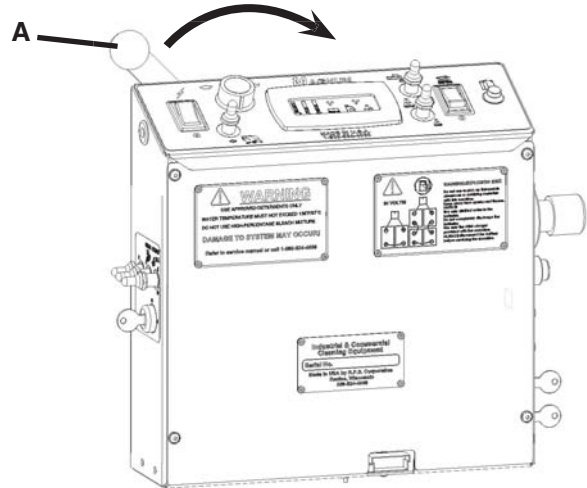

2. Loosen the two knobs (**B**) on the Squeegee and slide them into the slots in the Squeegee Mounting Plate (**SEE BELOW**).

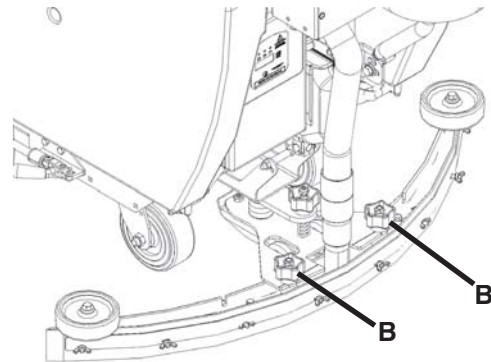


3. Tighten the two knobs and connect the Vacuum Hose (**C**) from the machine to the Squeegee (**SEE BELOW**).

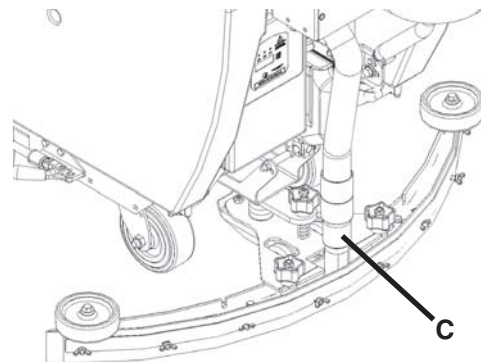


4. You may have to adjust the Squeegee Pitch (**SEE ADJUSTING SQUEEGEE ON THE NEXT PAGE**)

ADJUSTING SQUEEGEE:


1. Turning adjustment knob **(A)** clockwise (*tightening*) will lower tips and raise the center of the Squeegee (**SEE BELOW**).

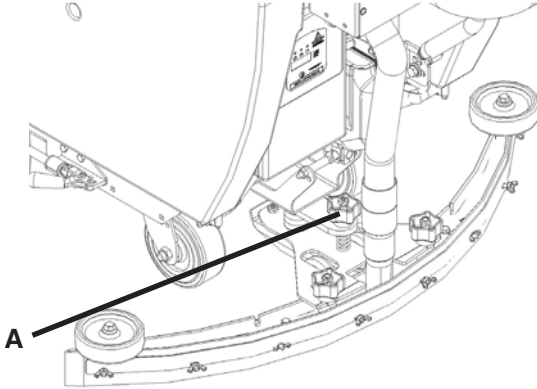


2. This Squeegee is adjusted too far back and will not pick up on the corners (**SEE BELOW**).
NOTE: Tips off of the floor.

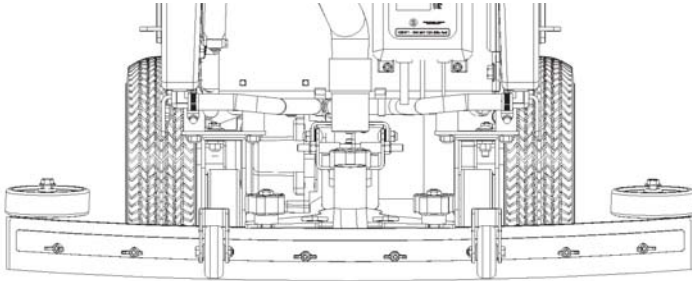

3. This Squeegee is adjusted too far forward and will not pick up in the center (**SEE BELOW**).
NOTE: Center spaced off the floor.

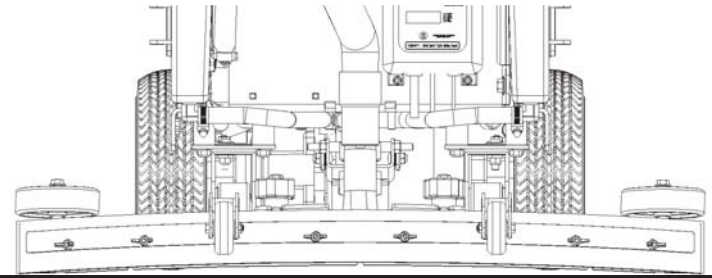


4. This Squeegee is adjusted just right with good deflection across the entire rear blade (**SEE BELOW**).

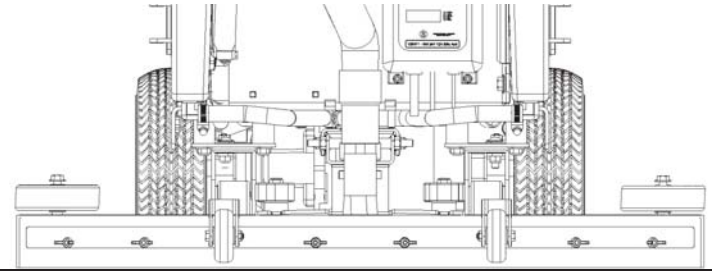

REMOVING SQUEEGEE:

1. With the Squeegee in the up position, turn machine power **OFF**.
2. Disconnect Vacuum Hose **(A)** from Squeegee and loosen both knobs **(B)** (**SEE BELOW**).

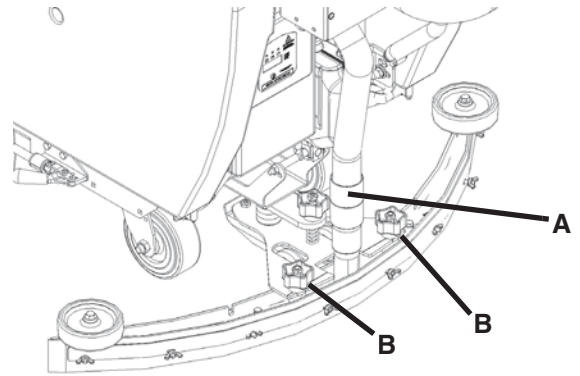

3. Pull Squeegee assembly backward from the lifting carrier.
4. Inspect or repair as needed and reinstall.

REPLACING OR ROTATING SQUEEGEE BLADES:


NOTICE

FOR SAFETY: Before leaving or servicing the machine, stop on a level surface, turn off machine and remove key.


1. Remove the Squeegee Assembly from the machine. Remove Blade retainer strap and remove Squeegee Blade.
2. Rotate the Squeegee to new edge position or replace as required.
3. Install Blade on the locating pins of Squeegee Assembly.
4. Install Squeegee Retainer Strap.
5. Fasten and lock knobs, starting in the center and moving outwards.

INSTALLING DISK PAD DRIVER OR BRUSH:


1. Turn on machine power.
2. Raise the Scrubdeck by depressing the Brush switch to the up and *OFF* position and turn the machine power back *OFF*. Remove Key.
3. If the machine is equipped with Jaws, remove pin (**A**) and undo latch (**B**) on front of Jaws to open them (**SEE BELOW**).

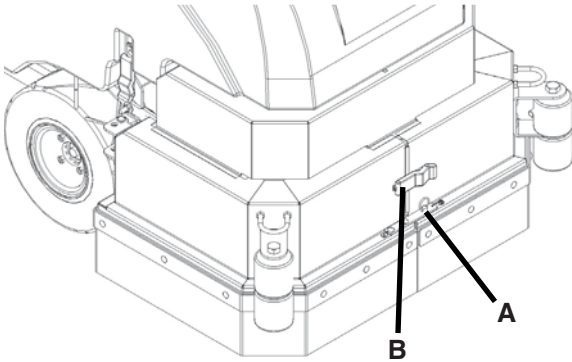

4. If the machine is equipped with a Shroud, unscrew Shroud Star Knobs (**C**) and pull Shroud forwards - Away from the front of the Scrubdeck (**SEE BELOW**).

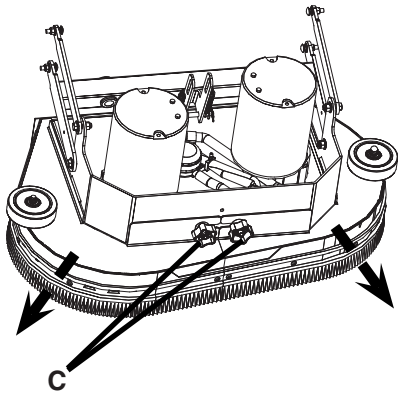


5. Attach Brushes or Pads to Motor Drives. Squeeze the scissor locking device and lift brush up on to the motor drive hub. Make sure the scissors close and lock on the brushes (**SEE BELOW**).

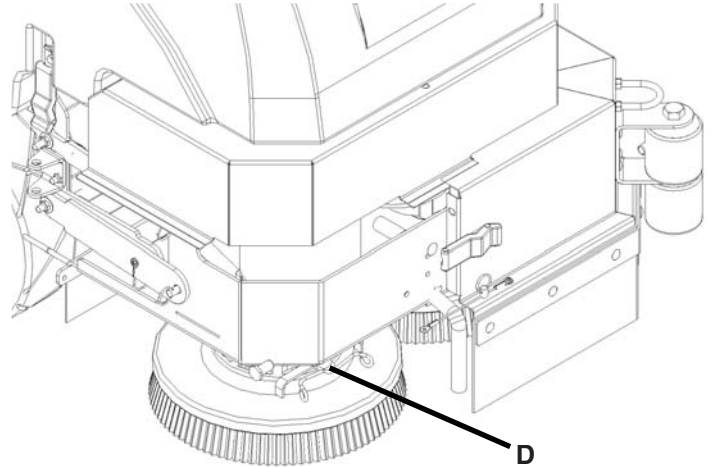

INSTALLING DRIVER PADS:

1. Select the correct Pads that best meet your cleaning application needs. Consult your local dealer for assistance.
2. Pad Installation: Attach Pads to Pad Drivers before connecting drivers to motor hub. Screw center clip (**E**) into place (**SEE BELOW**).

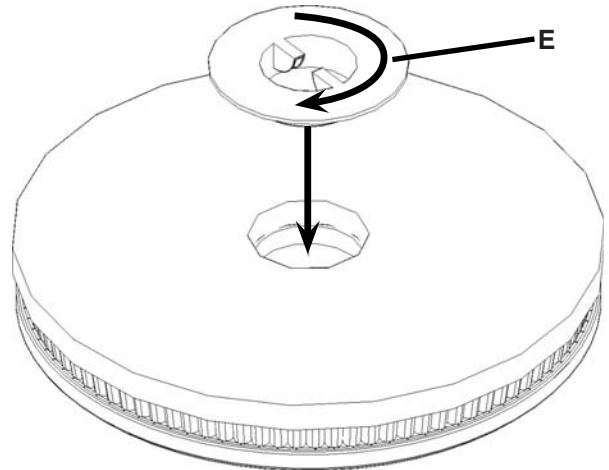

SCRUB BRUSHES / PADS:

There are many different types of brushes available to cover applications from cleaning heavily soiled floors to polishing. A Pad Driver is also available to take advantage of the many cleaning pads on the market. Please refer to the “**Common Wear Parts**” page to assist in selecting the proper Brush / Pad for the work at hand.


INSTALLING CYLINDRICAL BRUSH:

1. Turn on machine power.
2. Raise the Scrubdeck by depressing the Brush switch to the up and *OFF* position and turn machine power back off. Remove Key.


CAUTION

Disconnect the batteries.

3. Remove side access door on each side of the Scrubdeck by depressing latch (**A**) and unscrewing the Thumb Screw (**B**) (SEE BELOW).

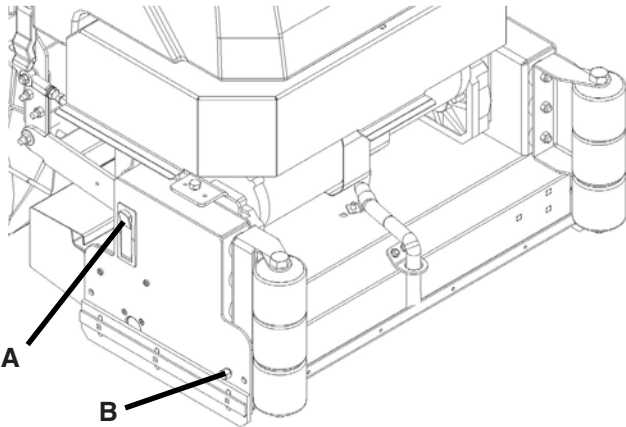

4. Slide Brush (**C**) into brush area and engage onto the Brush Driver on the opposite side (SEE BELOW).

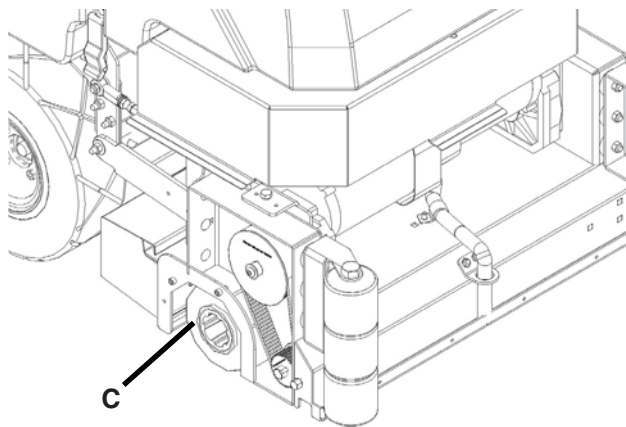


5. When Brushes are engaged, replace the side access door.
6. Lift up on the Wipers first to close the side door and then depress the latch until the door is secured.

NOTICE

If the Brushes are not fully engaged with the Drivers, the Brushes will be damaged. Do **NOT** force the access door back on. This usually indicates improper Brush installation.


7. Brush drivers shown misaligned (SEE BELOW).

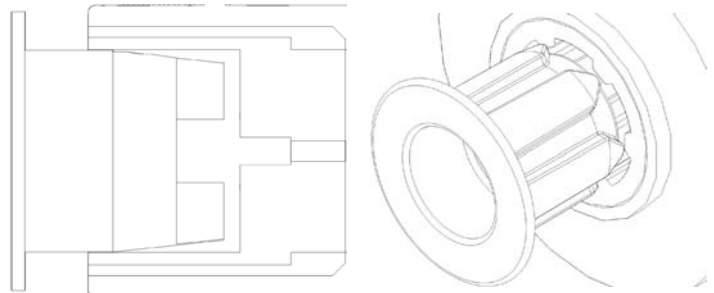

OLD STYLE DRIVER

NEW STYLE DRIVER

8. Brush driver shown properly aligned (SEE BELOW).

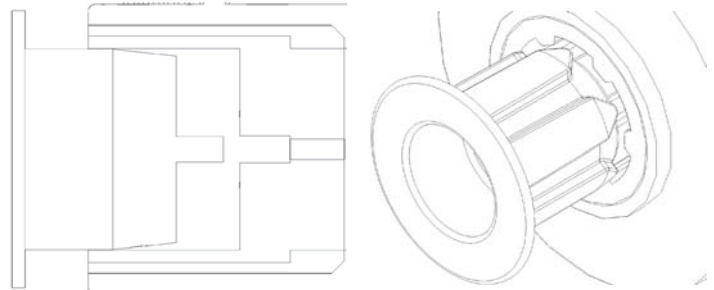


OLD STYLE DRIVER

NEW STYLE DRIVER

9. To adjust the tension of the belts, turn adjustment


screw (**D**) clockwise to tighten and counterclockwise to loosen (SEE BELOW).

10. To adjust the height of the Wipers, loosen the 3 screws (**E**) and slide Wiper Blades up or down in the slots (SEE BELOW).

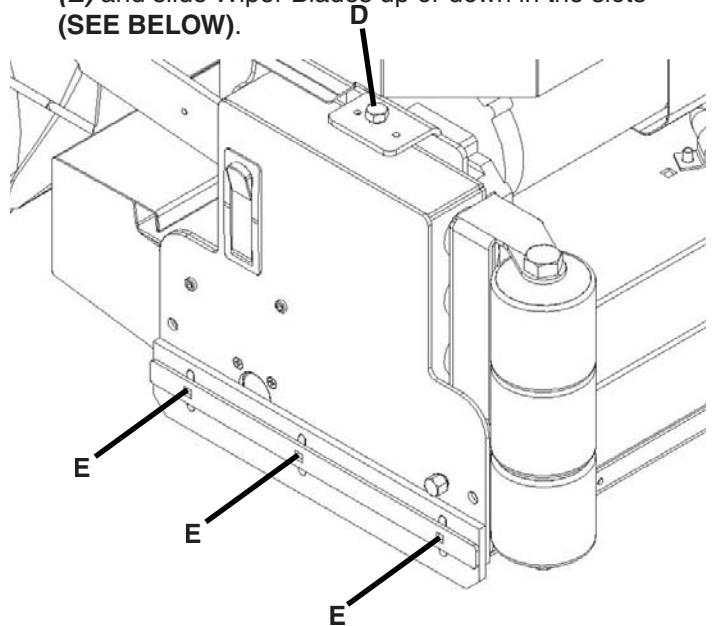


INSTALLING EDGE PADS:

1. Turn on machine power.
2. Raise the Scrubdeck by depressing the Brush switch to the UP and OFF position and turn machine power back off.
3. Select the correct Pads that best meet your cleaning application. Consult your local dealer for assistance.
4. Remove any Pad previously attached to the EDGE Grip Face by pulling down from the corners (**SEE BELOW**).

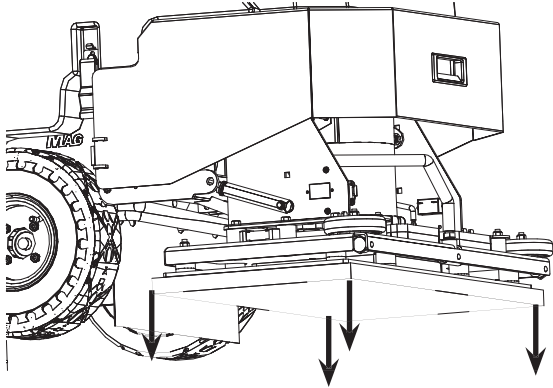

5. Once Grip Face is clear of any Pads, place pad wanted for application centered on the Grip Face (*This will leave a 1/2" overhang on all sides*).
6. Press upwards on the Pad to secure it in place (**SEE BELOW**).

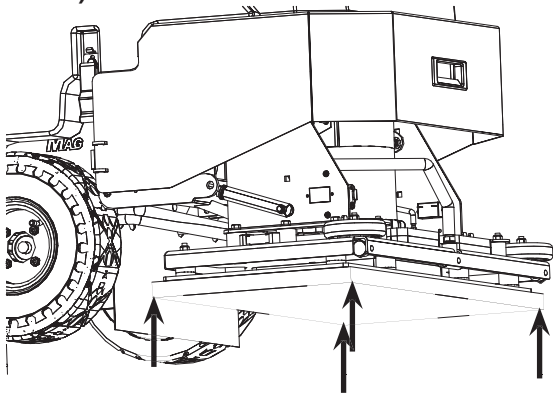


7. With Pad attached securely to Grip Face of EDGE Deck, the machine is ready to use.

LEVELING EDGE DECKS:

NOTICE

All Scrubdeck's should be level at time of machine delivery. If machine Scrubdeck is not level - Contact your Servicing Dealer.

1. Drive machine to a flat level surface and turn machine OFF.
2. Ensure that Scrubdeck is in full upright position.
3. Turn on machine and depress the brush switch. Just before the Scrubdeck's EDGE Pad touches the ground, turn machine OFF.
4. Tip Machine Tank back to gain access to the Scrubdeck's Adjustable arms.
5. Loosen the Locking Nut (**A**) on the Adjustable Deck Arms. Turn the Hexagonal Arm (**B**) on each side of the Scrubdeck to level it. Use the Scrubdeck Levels (**C**) built into the deck (**SEE BELOW**).

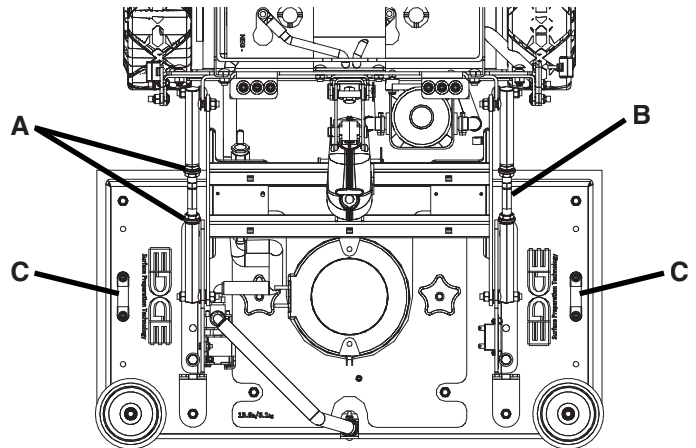

6. Extending the Adjustable Arms raise the front and lowers the rear of the Scrubdeck. After Scrubdeck has been leveled - tighten Locking Nuts (**A**).

NOTICE


NEVER place aggressive Pads (Maroon Prep, Dominator HD Strip, etc.) directly onto the Grip Face. Always use Red or Blue Spacer pad to prevent Grip Face damage.

LEVELING PROPOLISH DISK DECKS:

NOTICE

All Scrubdeck's should be level at time of machine delivery. If machine Scrubdeck is not level - Contact your Servicing Dealer.

1. Drive machine to a flat level surface and turn machine off.
2. Ensure that Scrubdeck is in full upright position.
3. Turn on machine and depress the Brush switch. Just before the Scrubdeck's Brushes touch the ground, turn machine OFF.
4. Tip Machine Tank back to gain access to the Scrubdeck's Adjustable arms.
5. Loosen the Locking Nut **(A)** on the Adjustable Deck Arms. Turn the Hexagonal Arm **(B)** on each side of the Scrubdeck to level it. Use the Scrubdeck Levels **(C)** built onto the deck **(SEE BELOW)**.

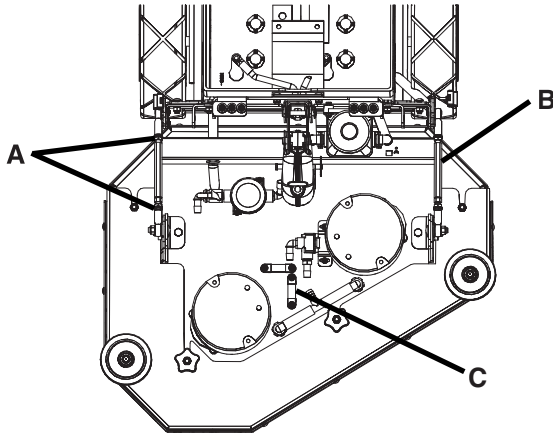


6. Extending the Adjustable Arms raise the front and lowers the rear of the Scrubdeck. After Scrubdeck has been leveled (*ensure correct pitch backward - if you have*) - retighten Locking Nuts **(A)**.

LEVELING CYLINDRICAL DECKS:

NOTICE

All Scrubdeck's should be level at time of machine delivery. If machine Scrubdeck is not level - Contact your Servicing Dealer.


1. Drive machine to a flat level surface and turn machine off.
2. Ensure that Scrubdeck is in full upright position.
3. Turn on machine and depress the Brush switch. Just before the Scrubdeck's Brushes touch the ground, turn machine OFF.
4. Tip Machine Tank back to gain access to the Scrubdeck's Adjustable arms.
5. Loosen the Locking Nut **(A)** on the Adjustable Deck Arms. Turn the Hexagonal Arm **(B)** on each side of the Scrubdeck to level it. Use the levels built into the deck **(SEE BELOW)**.

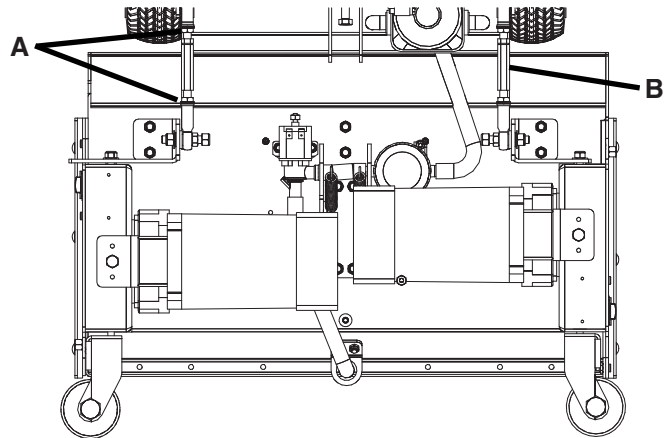


6. Extending the Adjustable Arms raise the front and lowers the rear of the Scrubdeck. After Scrubdeck has been leveled - retighten Locking Nuts **(A)**.

SIDE BROOM SYSTEM:


1. Your machine may come equipped with the *Optional Side Broom System* (**SEE BELOW**).

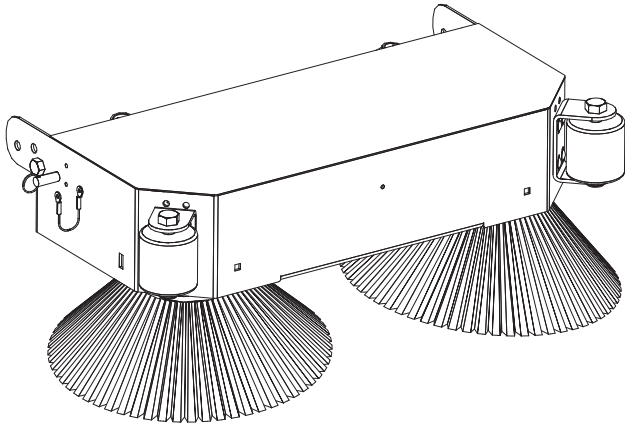

2. Flip Side Broom switch (*Yellow Toggle on the left side of the Control Panel*) to engage broom.
3. To adjust the Side Broom height, turn adjustment screws (**A**) clockwise to raise and counterclockwise to lower the Side Brooms (**SEE BELOW**).

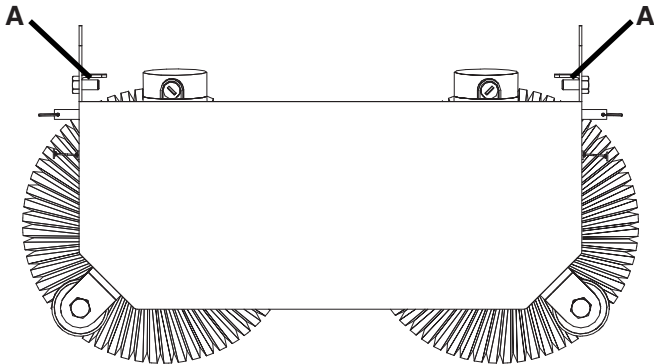

4. To move Side Broom system out of the way when not in use, just pull the pin (**B**) on each side of the Scrubdeck and rotate Side Broom System to the up position and reinsert pin (**SEE BELOW**).

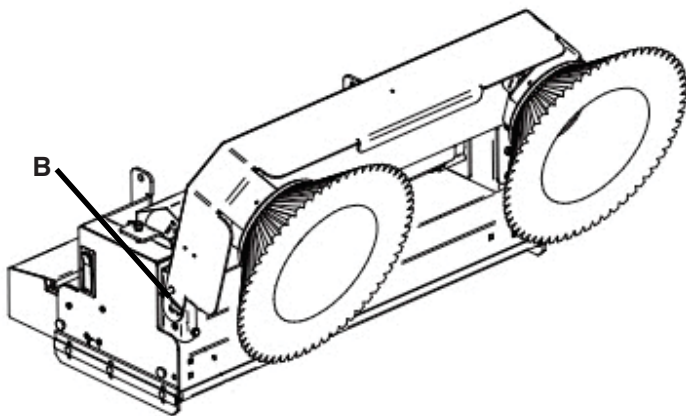

5. Brooms adjusted too low (**SEE BELOW**).



6. Brooms adjusted too high (**SEE BELOW**).



7. Brooms adjusted just right (**SEE BELOW**).



MACHINE OPERATION


PRE-CLEANING CHECKLIST:

Read and understand the Safety Messages section on Pages 3 and 4 before operating the machine.

1. Check Battery Condition Gauge on the Control Panel. Make sure Batteries are fully charged before using.
2. Check the condition of the Pads or Brushes.
3. Check the condition of the Squeegee Blades.
4. Raise the Scrubdeck and Squeegee before transporting then transport the machine to the filling station.
5. Turn the machine *OFF*.
6. Fill the Tank with up to 17 gallons of clean water either at the front fill port **(A)** or rear fill port **(B)** (**SEE BELOW**).
7. Add **APPROVED** cleaning chemical to the Tank. Use the proper dilution ratio indicated on the bottle. Contact us at 1(800)-634-4060 or +011-262-681-3583 if unsure.

NOTICE

The clear tube (*Solution Sight Tube*) **(C)** at the rear of the machine indicates the amount of water in the Tank (**SEE BELOW**).

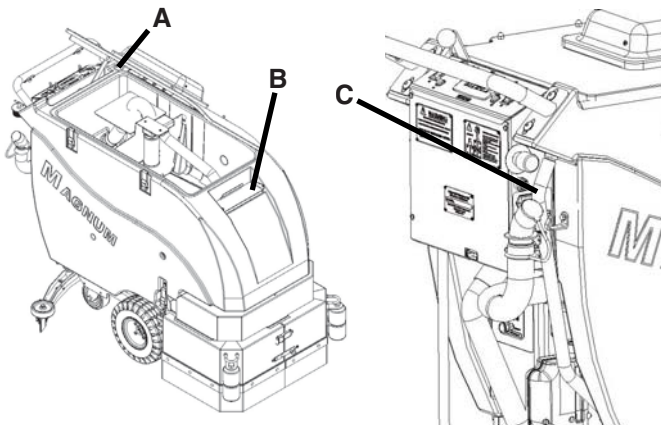

OPERATING HINTS:

1. Observe the amount of solution the machine is dispensing on the floor and adjust to the desired flow. To increase the solution flow rate, press the Solution Control Toggle up. To shut the solution *OFF* completely, just release the Drive button, or use dash mounted switch.
2. Keep an eye on the clear Vacuum cover to make sure that there is not any foamy buildup in the Recovery Tank. If excess foam begins to develop, pour a recommended foam control solution into the Recovery Tank. Foam is usually an indication of excessive soap.
3. Always operate at lower speeds when scrubbing around walls and objects. You should reduce the speed to maintain control when turning.
4. If Squeegee starts to streak, raise and wipe the Blades with a clean cloth. If the problem continues, check the Squeegee Blades for wear or damage and rotate if needed. You may need to pre-sweep before scrubbing. (**Only Use OEM Parts**)
5. Change or turn over Brushes / Pads when dirty.
6. Stay clear of objects protruding from the floor such as sockets, grates, etc, for they will damage the Brushes / Pads and Squeegee Blades.
7. Always keep an eye on your gauges. They let you know the status of a particular system at a glance. If your battery gauge is reading low you must stop immediately and recharge. Running the Batteries dead will result in damage to the Batteries.
8. When you run out of solution, raise the Scrubdeck and continue to Vacuum the remaining water until it is all consumed. The Solution Sight Tube is used to indicate the level of detergent remaining in the Tank.
9. When you are ready to stop, raise the Scrubdeck, turn *OFF* the solution switch, raise the Squeegee and drive the machine back to the charging area. Be sure to drain both Tanks before storing the machine.

⚠ DANGER

EXPLOSION RISK! Flammable materials can cause an explosion or fire. Do NOT use flammable materials in Tank or pick up.

⚠ CAUTION

TO AVOID DAMAGE TO THIS MACHINE:

- Use APPROVED detergents only
- Water temperature must not exceed 130°F/54°C
- Do NOT use high-percentage Bleach mixture

ONE PASS SCRUBBING:


1. Turn on machine Power Switch **(A)**, make sure the Speed Control Knob **(B)** is at a lower setting.
2. Lower the Squeegee by rotating the Squeegee Lift Lever **(C)** all the way to the right (*Vacuum Motor will turn on automatically*).
3. Lower Scrubdeck head to the floor by pressing the Scrubdeck Switch on the Control Panel **(G)**.
4. Press up or down on the Solution Flow Toggle **(H)** to regulate the amount of solution flow.
5. Begin scrubbing by pressing one of the green Drive Buttons **(D)** on the handle bars. Adjust the Speed Control Knob **(B)** to the desired setting.
6. Once the machine begins to move, check the down pressure on the LCD screen **(F)**. To adjust the down pressure, push toggle switch **(I)** forward to increase pressure backward to decrease pressure. Start scrubbing at the #1 or #2 marks. Do not use the #4 or #5 marks without management's approval.
7. To operate the machine in reverse, simply pull the Reverse switch **(E)** back towards the Handlebar. The reverse speed is set to approximately 50% of the forward speed.
8. To stop the machine, let go of the Drive Buttons **(D)**.

SCRUB ONLY:

1. Turn on machine Power Switch **(A)** while making sure the Speed Control Knob **(B)** is at a lower setting.
2. Lower Scrubdeck head to the floor by pressing the Scrubdeck Switch on the Control Panel **(G)**
3. Press the Solution Flow Toggle button **(H)** up or down to regulate the amount of solution flow.
4. Begin scrubbing by pressing one of the green Drive Buttons **(D)** on the Handlebars. Adjust the Speed Control Knob **(B)** to the desired setting.
5. To operate the machine in reverse, simply pull the Reverse Switch **(E)** back towards the Handlebar. The reverse speed is set to approximately 50% of the forward speed.
6. To stop the machine, let go of the Drive Buttons **(D)**.

VACUUM ONLY:

1. Turn on machine Power Switch **(A)** while making sure the Speed Control Knob **(B)** is at a lower setting.
2. Lower the Squeegee by rotating the Squeegee Lift Lever **(C)** all the way to the right (*Vacuum Motor will turn on automatically*).
3. Begin vacuuming by pressing one of the green Drive Buttons **(D)** on the Handlebars.

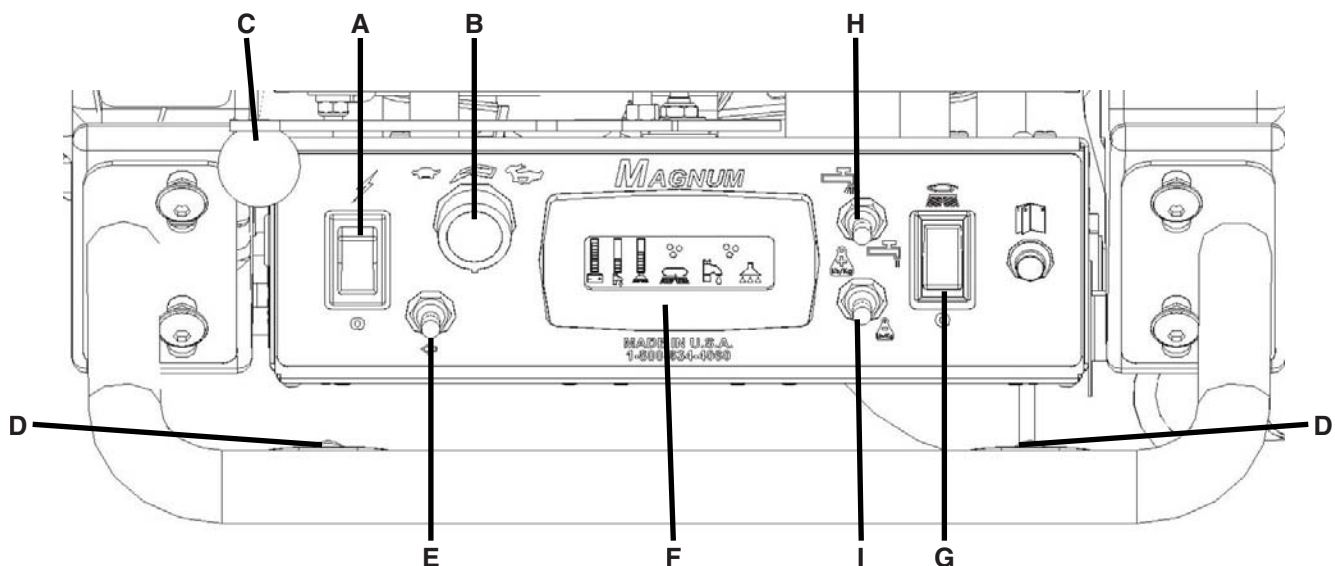


ADJUST SOLUTION FLOW:

1. Push UP (+) on the Solution Flow Toggle **(A)** to increase the solution flow and push DOWN (-) on the toggle to decrease solution flow **(SEE BELOW)**.




ADJUST CURTAINS:

1. For Jaw curtains, release Jaw latch **(B)** and remove Jaw Pin **(C)** on the front of the Jaws to open them **(SEE BELOW)**.
2. Loosen curtain band screws **(D)** **(SEE BELOW)**.
3. To adjust curtain to the desired height, just slide the curtain up or down in the slits and tighten screws.
4. Close Jaws - reconnect the latch and reinsert the pin.

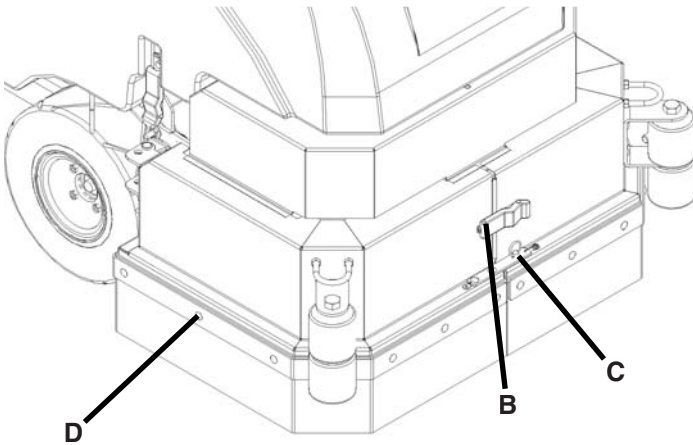

ADJUST WIPERS :


1. For Cylindrical side Wipers, loosen Wiper band screws **(E)** **(SEE BELOW)**.
2. To adjust Wiper to the desired height, just slide the Wiper up or down in the slots and tighten the screws.

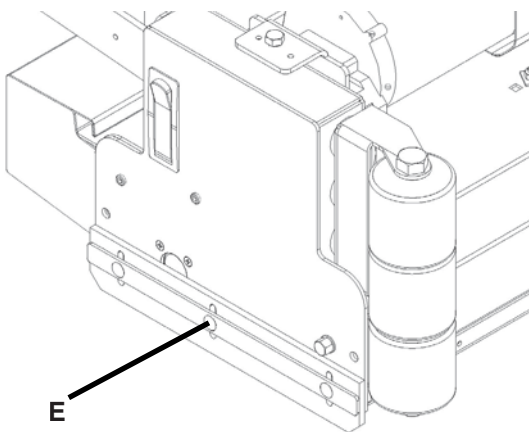

DRAINING SOLUTION TANK:

To drain unwanted cleaning solution from the Solution Tank, perform the following steps: **(SEE BELOW)**

1. Pull the clear Sight Tube/Drain Hose **(F)** off barbed fitting.
2. Rinse out Tank and solution flow system with clean water.

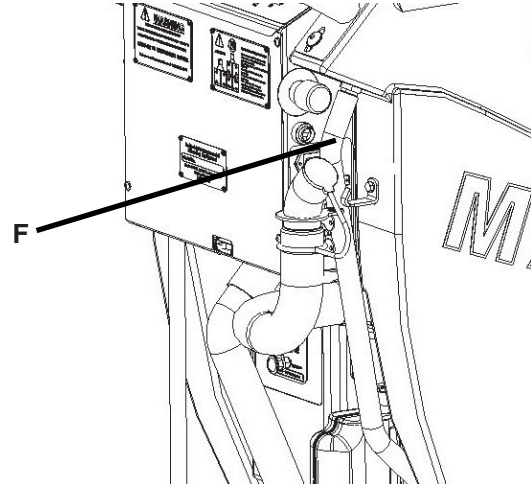

DRAINING RECOVERY TANK:

Always empty Recovery Tank when refilling the Solution Tank. You can refill the Solution Tank while the Recovery Tank is draining.


1. To drain the Recovery Tank remove Drain Hose **(G)** from hook at rear of Tank and pop off cap **(SEE BELOW)**.

NOTICE

Leave Recovery Lid open while draining Tanks. Rinse thoroughly.


NOTICE

Get Supervisor APPROVAL first and drain at APPROVED locations only.

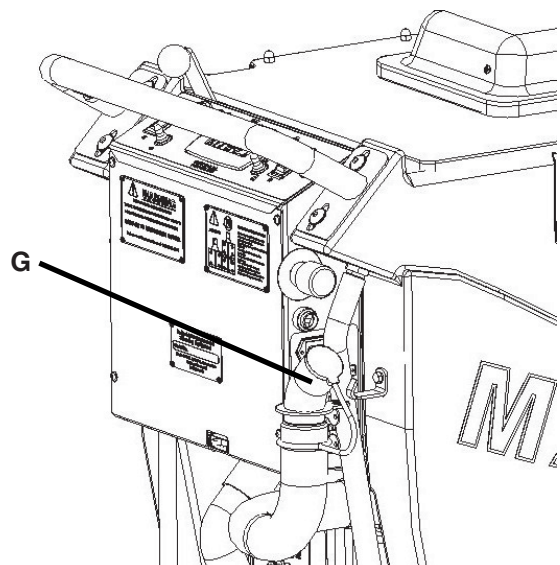

OPEN RECOVERY LID:


1. Release both latches **(A)** on Recovery Tank lid **(SEE BELOW)**.

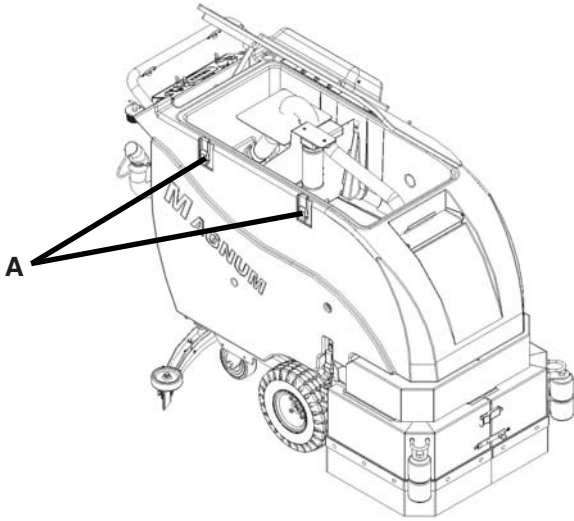


2. Rotate lid fully open.

FLUSH RECOVERY TANK:

1. Rinse the Recovery Tank after every use **(B)**. This will prevent heavy build-up on the bottom of the tank, foul odors as well as clogging of the Drain Hose **(SEE BELOW)**.

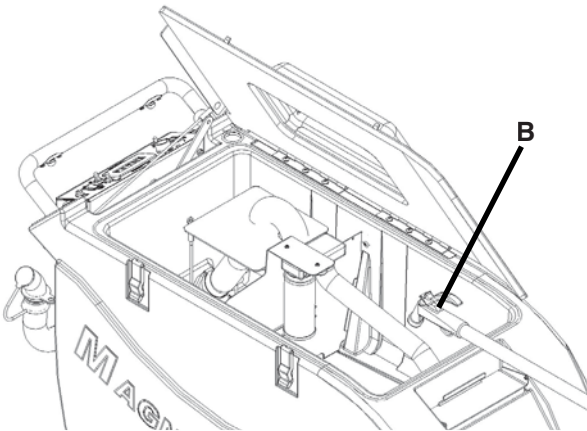

2. Remove Drain Hose **(C)** and open to allow for drainage of the Recovery Tank **(SEE BELOW)**.

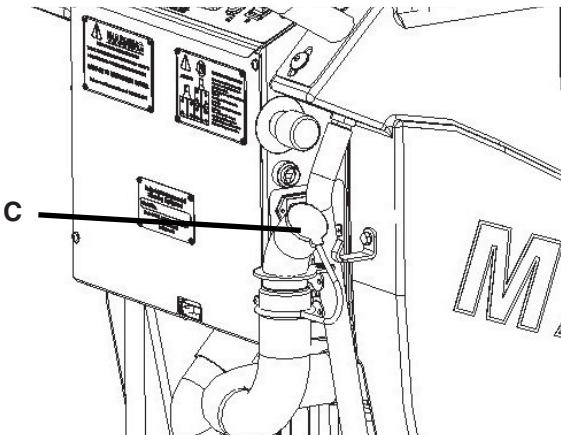

3. Flush Recovery Tank with water hose.
4. After rinsing, reattach the Drain Hose **(C)** on hook **(SEE ABOVE)**.


NOTICE

Keep water off of Control Panel.

CLEAN "DRAIN SAVER":

With Recovery Lid open and Tank fully drained:


1. Remove 2" Squeegee Intake Hose **(D)** from "Drain Saver" strainer **(E)** **(SEE BELOW)**.
2. Remove stainless screen and dispose of debris.
3. Rinse screen with fresh water from the outside while holding the screen upside down. This will allow for better cleaning.
4. Replace the screen into the bracket.
5. Replace 2" Squeegee Intake Hose.

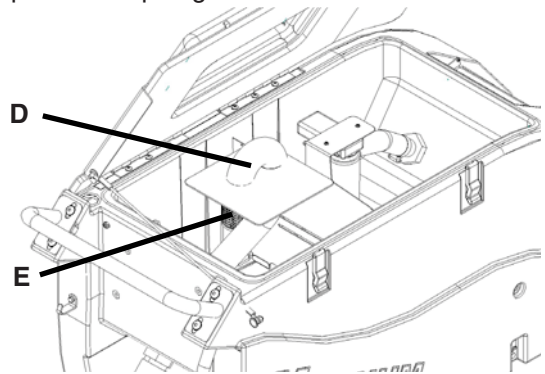

CLEAN VACUUM SCREEN:


With Recovery Lid open and Tank fully drained:

1. Remove Vacuum Screen retaining clip **(F)** **(SEE BELOW)**.
2. Pull Vacuum Screen and float ball assembly **(G)** off of the Vacuum Box.
3. Rinse with hot water.
4. Dry thoroughly.
5. Replace the Vacuum Screen onto box.
6. Replace and tighten retaining clip.

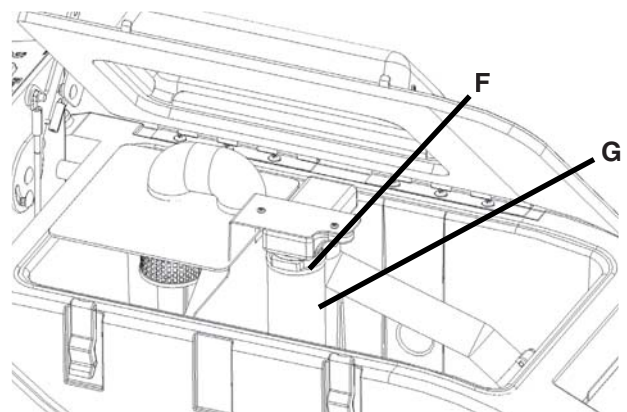

TIP TANK:


1. Fully drain Solution Tank and the Recovery Tank.
2. Remove Squeegee.
3. Unlatch Tank Latch **(A)** on each side of the machine **(SEE BELOW)**.

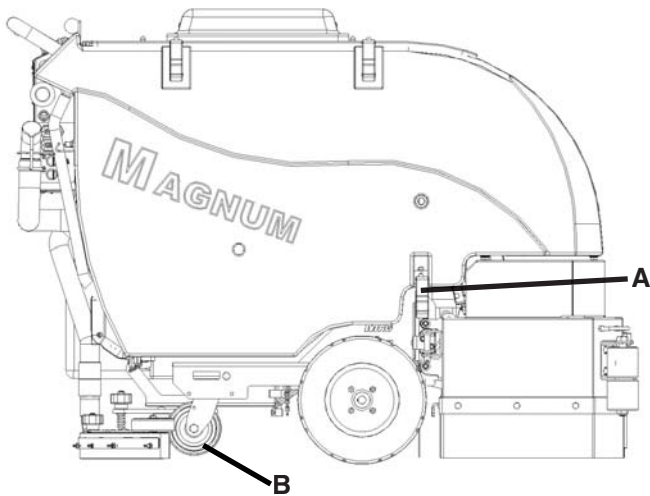


⚠ CAUTION

Casters need to be swiveled back **(B)** as shown, otherwise machine will tip.

4. Open Jaws **(SEE BELOW)**.

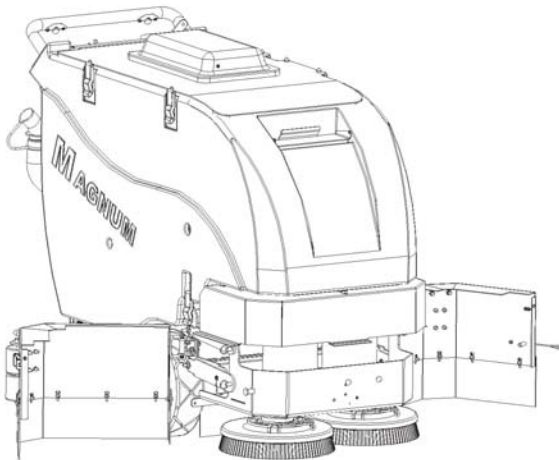


5. Tip Tank Back carefully until supported by strap **(SEE BELOW)**.

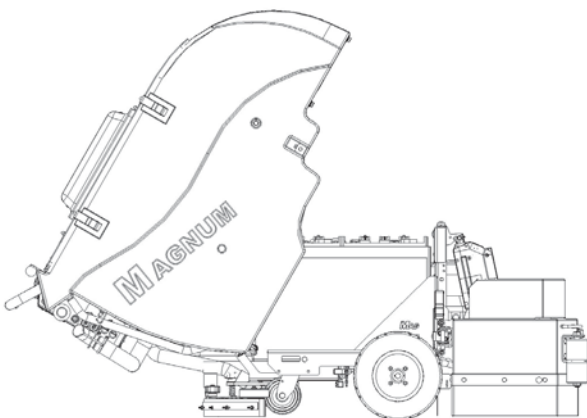


SQUEEGEE UP:

1. To raise the Squeegee off the floor, rotate Squeegee Lift Lever **(C)** counter-clockwise all the way to the left **(SEE BELOW)**.

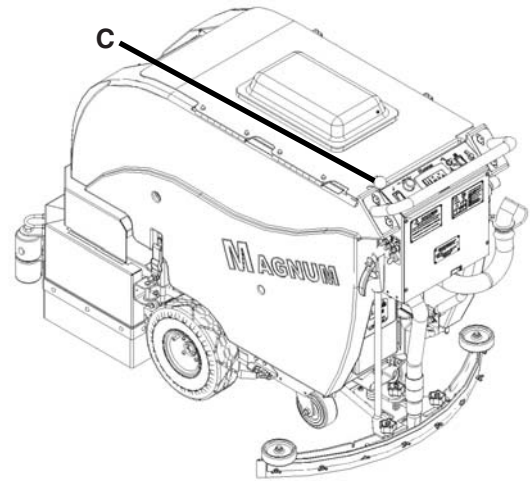


SQUEEGEE DOWN:

1. To Lower the Squeegee to the floor, rotate Squeegee Lift Lever **(C)** clockwise all the way to the right **(SEE BELOW)**. Vacuum motor will turn on automatically. Use with remote Vacuum Wand.

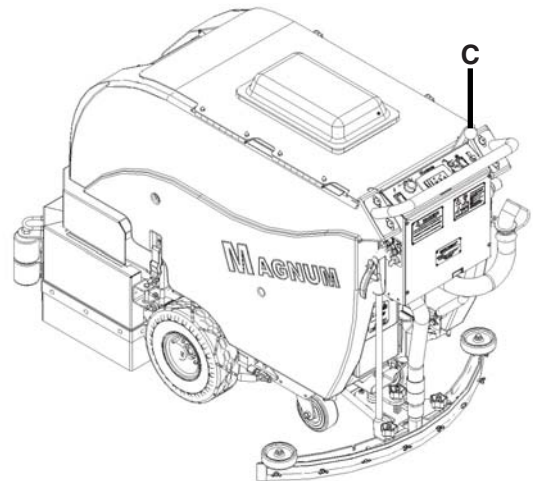


DECK HEIGHT ADJUSTMENT:

1. To adjust deck height for Brush clearance, loosen jam nut on adjustment bolt (**A**), turn adjustment bolt clockwise to raise Scrubdeck - counterclockwise to lower Scrubdeck. Retighten jam nut (**SEE BELOW**).

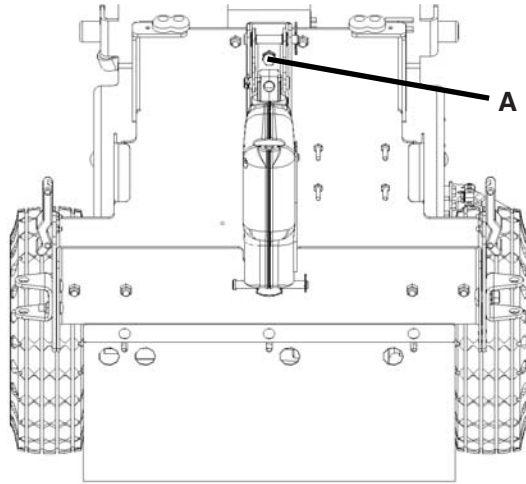


VACUUM MOTOR:

1. The machine is equipped with a 24 volt, .75HP Vacuum Motor (**B**) (**SEE BELOW**).
2. If foam or water gets past the Recovery Tank's Vac Screen/Ball system, the "Unloader Valve" (**C**) will drain it from the "Vac Box" (**D**) (**SEE BELOW**).
3. The Vacuum Motor has an (*Optional*) "Foam Muffler" (**E**) available to quiet machine operation.

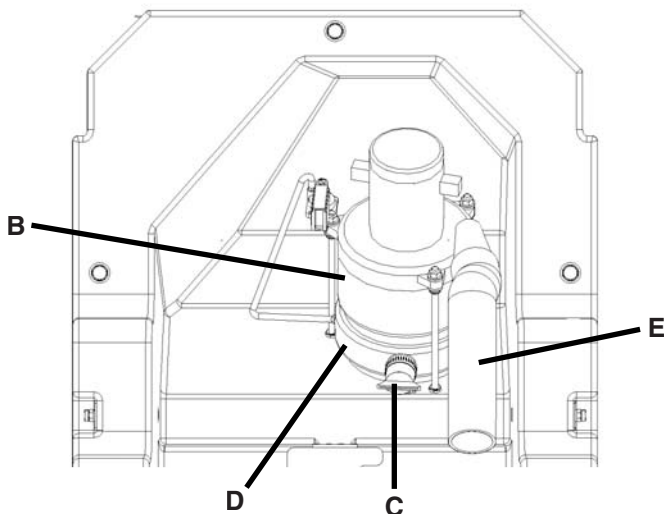


SOLUTION FILTER:

The solution system has an "Inline Filter" (**F**) to filter out cleaning solution prior to scrubbing (**SEE BELOW**).

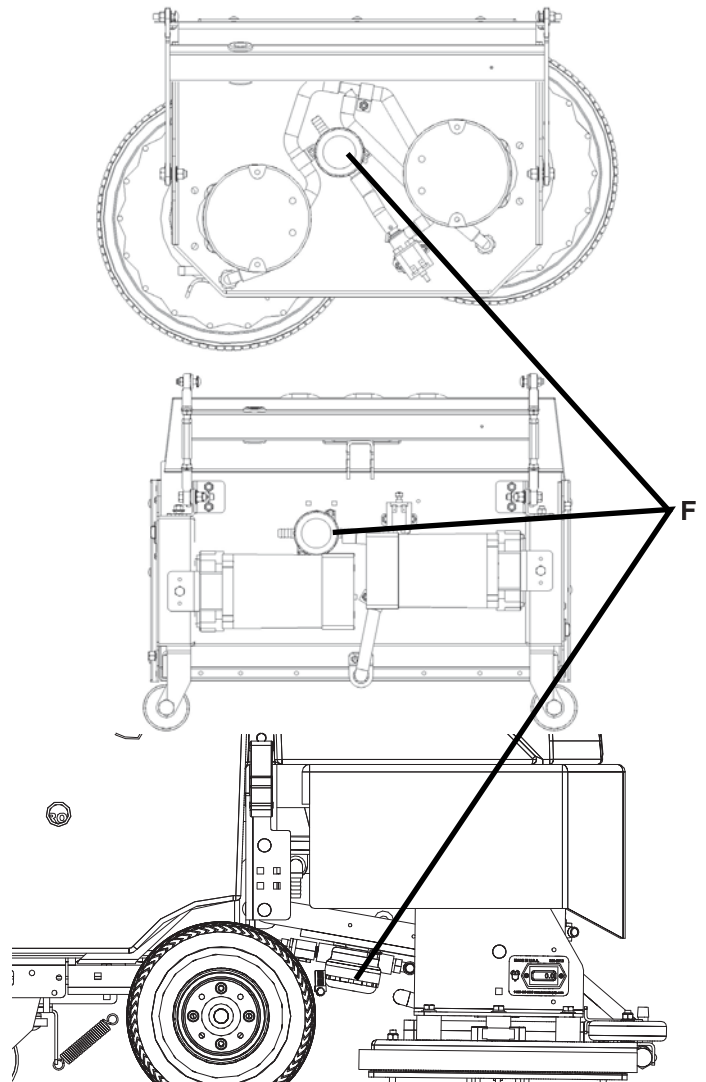

CLEANING SOLUTION FILTER:

1. To clean the Solution Filter, first unscrew the clear cap (**G**) from house (**I**) and remove the stainless steel screen (**H**) (**SEE BELOW**).
2. Rinse any debris from the screen with clean water.
3. Reinstall screen and screw cap back on tightly.

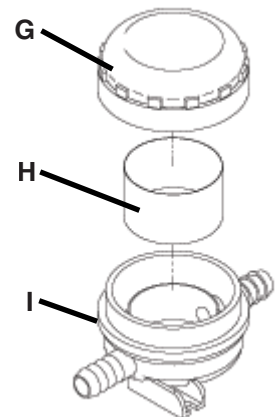

BATTERY CHARGING

Charger Specifications

- Output voltage of 24 Volts
- Output current of 18 amps max (*Optional*)
- Input voltage of 110 Volts/ 60 Hz (*220V/50 Hz available*)
- Automatic shut off circuit
- Made for Deep Cycle Batteries

⚠ DANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

⚠ WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

⚠ WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

⚠ CAUTION




Always use the automatic battery charger provided by the manufacturer of this machine to charge the Batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.

EXTERNAL BATTERY CHARGING:

1. Transport machine to a well ventilated area for charging.
2. Turn the machine off. Tip Tank back.
3. Check the water in each Battery (**A**). Do not charge the machine unless the water is slightly higher than the plates. If needed, add enough distilled water to just slightly cover the plates. Be careful not to over fill. Batteries can overflow during charging. Replace caps before charging.
4. First, plug the red 50 Charger plug into the machine's Charger Port (**B**). While the Charger plug

is connected, plug the charger power cord into a grounded 110 Volt standard wall outlet (**C**).

5. The Charger will automatically begin charging and automatically shut off when fully charged (*check Battery gauge*).
6. After the Charger has turned off - First, unplug the Charger from the wall outlet. Second, unplug the red 50 Charger plug from the machine.
7. Recheck the cell level after charging. If needed, add distilled water up to the correct level. Be certain to replace the caps securely and to wipe off the top of the Batteries with a clean cloth.

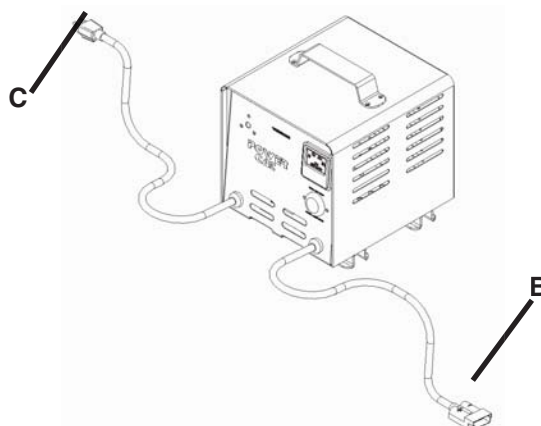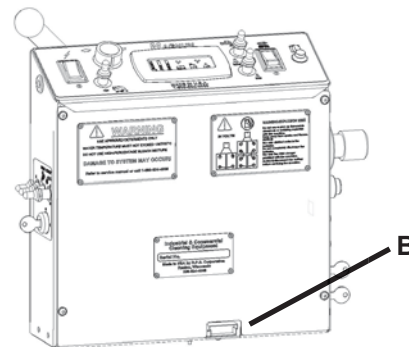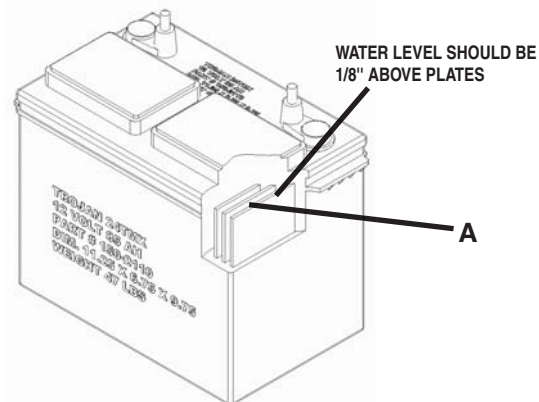

ON-BOARD CHARGER

Charger Specifications

- Output voltage of 24 Volts
- Output current of 12 amps max
- Input voltage of 110 Volts/ 60 Hz
(220V/50 Hz available)
- Automatic shut off circuit
- Made for Deep Cycle Batteries

⚠ DANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

⚠ WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

⚠ WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

⚠ CAUTION



Always use the automatic battery charger provided by the manufacturer of this machine to charge the Batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.

ON-BOARD BATTERY CHARGING (OPTIONAL):

1. Transport machine to a well ventilated area for charging.
2. Turn the machine off. Tip Tank back.
3. Check the water in each Battery **(A)**. Do not charge the machine unless the water is slightly higher than the plates. If needed, add enough distilled water to just slightly cover the plates. Be careful not to over fill. Batteries can overflow during charging. Replace caps before charging.
4. Plug the Charger power cord into a grounded standard

wall outlet **(B)**.

5. The green Indicator Light **(C)** will come on and the Charger will automatically begin charging. When finished, the Charger will automatically shut off as well as the green indicator light (*check Battery gauge*).
6. After the Charger has turned off, unplug the Charger from the wall outlet.
7. Recheck the cell level after charging. If needed, add distilled water up to the correct level. Be certain to replace the caps securely and to wipe off the top of the Batteries with a clean cloth.

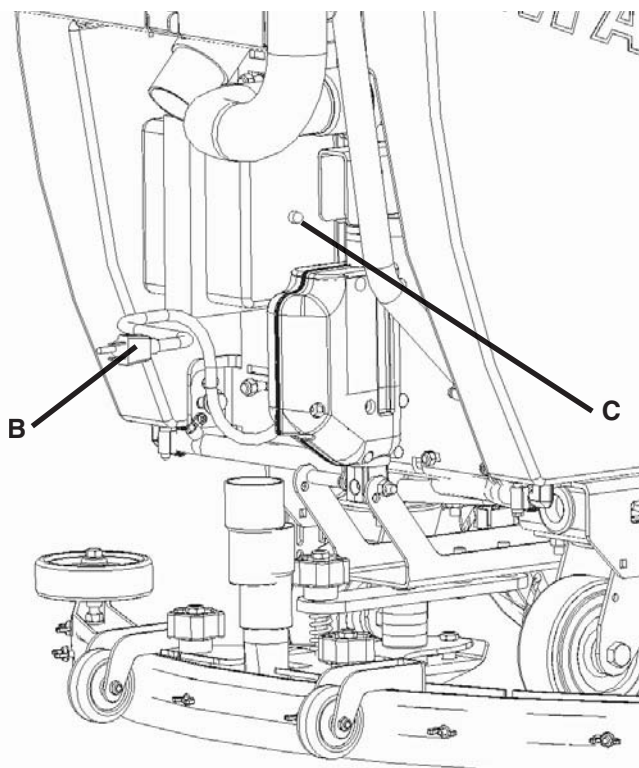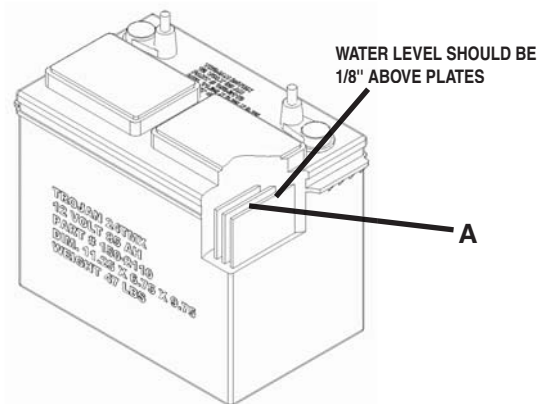

BATTERY MAINTENANCE GUIDE

SAFETY:

⚠ DANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

⚠ WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

⚠ WARNING

The Batteries in this machine produce hazardous voltage which can cause electrical shock, burns and/or electrocution. Always disconnect Batteries before servicing this machine.

⚠ WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

⚠ WARNING

Dress safely. Do not wear rings or metal wrist watches when servicing this machine, as they can cause an electrical short circuit which can cause serious burns.

INSPECTION AND CLEANING:


- Keep Batteries clean and dry from residue
- Check that all vent caps are tight
- Use a solution of baking soda and water to clean if acid residue on Batteries or corrosion on the terminals
- Protective spray of petroleum jelly should be applied to terminals to reduce corrosion

STORAGE:

- Batteries should be fully charged prior to and during storage
- Never store discharged Batteries
- Store Batteries in a cool, dry place but never below freezing - Recharge in storage a minimum of every 30 days
- Recharge Batteries before putting them back into service

WATERING:

- Add water, NEVER ACID, to cells (*distilled water recommended*).
- Do not over water
- Before charging the Batteries, only add water if the plates are exposed. Add just enough water to cover the plates, then charge the batteries. Once fully charged, add water to the proper level as indicated below.
- For full charge plus series Batteries add water to the maximum water level indicator (**A**).
- Water watering, secure vent caps back on Batteries.

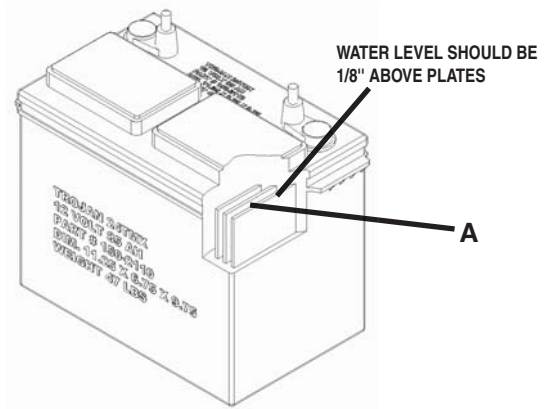


MAINTENANCE

DAILY MAINTENANCE:

1. Remove the clean Pads or Brushes. Never use soiled Pads when cleaning. Replace Pads when they become packed with residue.
2. Remove and clean debris from the float shut-off screen and Drain Saver located inside the Recovery Tank.
3. Drain and rinse Tanks thoroughly and flush out Solution Feed to deck.
4. Inspect Vacuum Hose for any objects obstructing the air flow.
5. Raise Squeegee and wipe Blades with a clean cloth. Store Squeegee in the raise position to prevent damage or setting of the Blades.
6. Wipe down machine if needed. Use a non-abrasive, non-solvent cleaner or a clean damp cloth.
7. Recharge the Batteries if needed.

WEEKLY MAINTENANCE:

1. Check Battery water level in each cell of the Batteries and fill as needed. Always use distilled water to refill Batteries. Batteries should be filled approximately 3/4" to 1" above the plates. Overfilling will cause the Batteries to leak during charging. The charging process creates gas bubbles inside the Battery, which effectively increases the volume of the electrolyte.

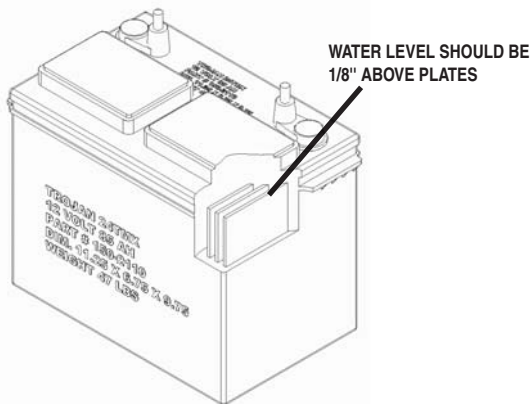

2. Clean Battery tops to prevent corrosion.
3. Flip Scrubdeck Brushes / Pads.
4. Drain and rinse tanks thoroughly. To thoroughly flush out any solution chemicals in solution line valves, refill solution tank with a few gallons of warm, clean water and run the machine until tank is empty.

MONTHLY MAINTENANCE:

1. Check Scrubdeck and Squeegee lifting cables for wear and spring tension.
2. Check machine for water leaks and loose nuts and bolts.
3. Check to see if Battery cables are tightened. Tighten,

if needed, 8-10 ft/lb MAX.

4. Grease caster swivel and Squeegee Pivot Point.

YEARLY MAINTENANCE:

Call your local dealer for yearly maintenance.

STORING MACHINE:

1. Be sure to flush the Tanks out completely. To thoroughly flush out any solution chemicals in solution line and valves, refill Solution Tank with a few gallons of warm clean water and run machine until Tank is empty.
2. Open the Recovery Tank lid to promote air circulation.
3. Raise Scrubdeck and Squeegee.

CHECKING BATTERY SPECIFIC GRAVITY:

Use a hydrometer to check the Battery specific gravity.

Checking Gravity:

- Hydrometer
- Battery

NOTICE

Do not take readings immediately after adding distilled water. If water and acid are not thoroughly mixed, the reading may not be accurate.

Check the hydrometer against this chart

| SPECIFIC GRAVITY @ 80°F (27°C) | BATTERY CONDITION |
|-----------------------------------|----------------------|
| 1.265 | 100% Charged |
| 1.225 | 75% Charged |
| 1.190 | 50% Charged |
| 1.155 | 25% Charged |
| 1.120 | Discharged |

NOTICE

If the readings are taken when the battery electrolyte is any temperature other than 80°F(27°C), the reading must be temperature corrected. To find the corrected specific gravity reading when the temperature of the battery electrolyte is other than 80°F(27°C): add (+) to the specific gravity reading 0.004 (4 points), for each 10°F(6°C) above 80°F(27°C). Subtract (-) from the specific reading 0.004 (4 points), for each 10°F(6°C) below 80°F(27°C).

PM RECORDS

CUSTOMER INFORMATION

| | | | |
|----------|-------|-------|---------|
| CUSTOMER | | EMAIL | |
| ADDRESS | | | PHONE |
| CITY | STATE | ZIP | CONTACT |

MACHINE INFORMATION

| | |
|----------------------|------------------------|
| MODEL #: | SERIAL #: |
| WORK ORDER#: | HOUR METER (Key): |
| CHASSIS HOUR METER: | HOUR METER (Traction): |
| RECHARGE NUMBER: | HOUR METER (Scrub): |
| ISOLATOR HOUR METER: | RE-CHARGE COUNTER: |

NOTE: Isolators need to be replaced on Scrubber Machines at 250 Hours or Annually

| BATTERY CONDITION | CELL 1 | CELL 2 | CELL 3 | CELL 4 | CELL 5 | CELL 6 |
|---------------------------|--------|--------|--------|--------|--------|--------|
| BATTERY 1 HYDROMETER | | | | | | |
| BATTERY 1 WATER CONDITION | | | | | | |
| BATTERY 2 HYDROMETER | | | | | | |
| BATTERY 2 WATER CONDITION | | | | | | |
| BATTERY 3 HYDROMETER | | | | | | |
| BATTERY 3 WATER CONDITION | | | | | | |
| BATTERY 4 HYDROMETER | | | | | | |
| BATTERY 4 WATER CONDITION | | | | | | |

CLEAN BATTERY TOPS. CHECK BATTERY CABLE AND TERMINAL CONDITION.

NOTES:

PAD/BRUSH CONDITION

| SCRUB BRUSH FIBER LENGTH | ROTATED BRUSHES | | |
|--------------------------|-----------------|------|---|
| BROOM DRIVER SOCKETS (4) | GOOD | WORN | NEEDS REPLACEMENT |
| DRIVER IDLER HUBS | GOOD | WORN | NEEDS REPLACEMENT |
| SIDE BROOM CONDITION | GOOD | WORN | NEEDS REPLACEMENT ROTATED SIDE TO SIDE |
| DISK PAD DRIVER | GOOD | WORN | NEEDS REPLACEMENT |
| EDGE PAD GRIP FACE | GOOD | WORN | NEEDS REPLACEMENT |

| CHECK OPERATION AND CONDITION OF: | IN SPEC | REPAIR | PROBLEM |
|-----------------------------------|---------|--------|---------|
| MAIN POWER SWITCH OR KEY SWITCH | | | |
| LCD DISPLAY | | | |
| PAGE BUTTON | | | |
| BRUSH PRESSURE TOGGLE | | | |
| MANAGERS LOCK OUT | | | |
| REVERSE SWITCH | | | |
| BRUSH SWITCH | | | |
| SOLUTION +/- SWITCH | | | |
| SOLUTION SOLENOID | | | |
| LOW SOLUTION LIGHT | | | |

| | | | |
|---------------------------------------|--|--|--|
| BRUSH DECK LIFT SYSTEM | | | |
| BRUSH MOTORS | | | |
| VACUUM SWITCH | | | |
| VACUUM MOTOR PERFORMANCE | | | |
| OFF-BOARD VAC SWITCH | | | |
| SQUEEGEE LIFT SYSTEM | | | |
| SQUEEGEE ADJUSTMENT PITCH AND HEIGHT | | | |
| SQUEEGEE BLADES | | | |
| DRAIN HOSE AND PLUG | | | |
| SIDE BROOM OPERATION | | | |
| SPRAY JET PUMP, HOSE & NOZZLE | | | |
| BATTERY CHARGER CONNECTION & FUNCTION | | | |
| PITCH OF SCRUBDECK (MUST BE LEVEL) | | | |
| PITCH OF EDGE DECK (MUST BE LEVEL) | | | |
| HANDLEBAR SWITCHES | | | |

| CLEAN AND / OR LUBRICATE | IN SPEC | REPAIR | PROBLEM |
|-------------------------------|---------|--------|---------|
| SOLUTION TANK CONDITION | | | |
| SQUEEGEE PIVOT POINTS & KNOBS | | | |
| SOLUTION FILTER CLEANING | | | |
| SCRUB DECK LINKAGE | | | |

| VISUALLY INSPECT | IN SPEC | REPAIR | PROBLEM |
|----------------------------------|---------|--------|---------|
| SOLUTION TANK CONDITION | | | |
| RECOVERY TANK & GASKET CONDITION | | | |
| DRAIN SAVER | | | |
| VACUUM FLOATS & SCREENS | | | |
| VACUUM HOSES | | | |
| SOLUTION HOSES | | | |
| BLADE RETAINERS & HARDWARE | | | |
| SQUEEGEE WHEELS | | | |
| BRUSH SKIRTS | | | |
| CASTER CONDITION | | | |
| DRIVE WHEELS CONDITION | | | |

COMMENTS

SERVICING DISTRIBUTOR _____

TECHNICIAN'S NAME _____ DATE _____ SIGNATURE _____

CUSTOMER'S NAME _____ DATE _____ SIGNATURE _____

TROUBLE-SHOOTING


| PROBLEM | CAUSE | SOLUTION |
|-------------------------------|--|--|
| NO POWER - NOTHING OPERATES | FAULTY POWER SWITCH BATTERIES NEED CHARGING FAULTY BATTERIES LOOSE BATTERY CABLE MAIN CIRCUIT BREAKER TRIPPED | CONTACT LOCAL SERVICING DEALER SEE CHARGING BATTERIES REPLACE BATTERY TIGHTEN LOOSE CABLE WAIT 5 MINUTES FOR AUTO RESET DETERMINE CAUSE AND CORRECT |
| SCRUBMOTOR DOES NOT OPERATE | GREEN DRIVE BUTTON IS NOT DEPRESSED CIRCUIT BREAKER TRIPPED FAULTY SCRUBDECK MOTOR OR WIRES | DEPRESS BUTTON ON HANDLE BAR RESET & REDUCE PRESSURE CONTACT LOCAL SERVICING DEALER |
| VACUUM MOTOR DOES NOT OPERATE | FAULTY VACUUM SWITCH CIRCUIT BREAKER TRIPPED FAULTY VACUUM MOTOR CARBON BRUSHES WORN | REPLACE SWITCH RESET & CHECK HOSE DETERMINE CAUSE AND CORRECT CONTACT LOCAL SERVICING DEALER CONTACT LOCAL SERVICING DEALER |
| INSUFFICIENT SOLUTION FLOW | SOLUTION TANK LOW FLOW LEVER TURNED DOWN SOLUTION FILTER CLOGGED SOLUTION LINE CLOGGED SOLUTION VALVE CLOGGED | REFILL SOLUTION TANK TURN LEVER MORE OPEN REMOVE COVER AND CLEAN REMOVE AND BLOW OUT WITH COMPRESSED AIR REMOVE COVER AND CLEAN |
| NO SOLUTION FLOW | NO SOLUTION IN TANK SOLUTION SWITCH IS OFF SOLUTION SCREEN CLOGGED FAULTY SOLUTION SOLENOID FAULTY SOLUTION SWITCH | FILL SOLUTION TANK TURN SOLUTION SWITCH ON REMOVE AND CLEAN SCREEN CONTACT LOCAL SERVICING DEALER CONTACT LOCAL SERVICING DEALER |
| POOR WATER RECOVERY | RECOVERY TANK IS FULL BALL / SCREEN IS CLOGGED VACUUM HOSE IS CLOGGED SQUEEGEE IS CLOGGED SQUEEGE BLADE IS WORN FAULTY VACUUM HOSE VACUUM MOTOR GASKET TORN TANK GASKET FAULTY DRAIN PLUG LOOSE VACUUM MOTOR FAULTY BATTERY CHARGE LOW | EMPTY RECOVERY TANK REMOVE SCREEN AND CLEAN REMOVE DEBRIS REMOVE DEBRIS ROTATE OR REPLACE BLADES CONTACT LOCAL SERVICING DEALER CONTACT LOCAL SERVICING DEALER CONTACT LOCAL SERVICING DEALER TIGHTEN PLUG CONTACT LOCAL SERVICING DEALER CHARGE BATTERIES OVERNIGHT |

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------|---------------------------|--|
| POOR WATER RECOVER ON TURNS | WIPERS WORN | REPLACE WIPER MATERIAL |
| | WIPERS CHATTER | TIGHTEN PIVOT POINTS |
| | SQUEEGEE SWING IS BINDING | CONTACT LOCAL SERVICING DEALER |
| | INCORRECT SQUEEGEE SIZE | CONTACT LOCAL SERVICING DEALER |
| TIRES NOISY | BEARING DRY | GREASE BEARINGS |
| | FAULTY HUBS | CONTACT LOCAL SERVICING DEALER |
| POOR TRACTION | EXCESSIVE BRUSH PRESSURE | REDUCE PRESSURE WITH SWITCH |
| | WORN DRIVE TIRE | REPLACE TIRES |
| | HEAVY SOAP CONCENTRATION | CONTACT LOCAL SERVICING DEALER |
| SHORT RUN TIME | BATTERIES RUN DOWN | CHARGE BATTERIES TWICE |
| | BATTERIES STILL DOWN | CONTACT LOCAL SERVICING DEALER |
| | BATTERIES LOW ON WATER | FILL WITH DISTILLED WATER TO $\frac{3}{4}$ " ABOVE THE LEAD PLATES |
| | BATTERIES OVER CYCLED | CONTACT LOCAL SERVICING DEALER |


TROUBLE-SHOOTING CENTRAL COMMAND

NOTE: This machine is operated by a sophisticated electronic “controller” that has many fail safes within it. It self-analyzes problems and flashes a four-digit alpha-numeric code of what is wrong in the LCD window.


Most of these codes require a technician attention. You should not attempt repairs you are unfamiliar with, especially if you are not authorized to work on this equipment.

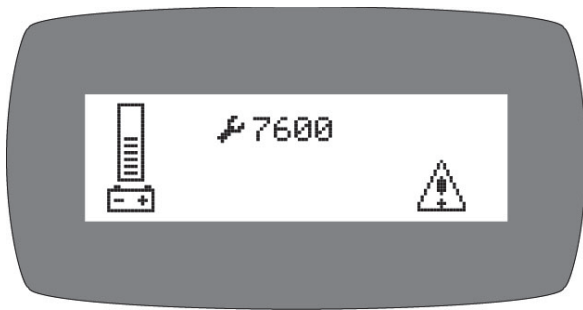


1. 7601 and 7602 ERROR: Scrubdeck current over load. This can occur when driving over a bump in the floor. To restart, turn *OFF* the Key and turn it on again. To avoid this error, either slow down on bumpy parts of the floor, or reduce down pressure on the Scrubdeck.

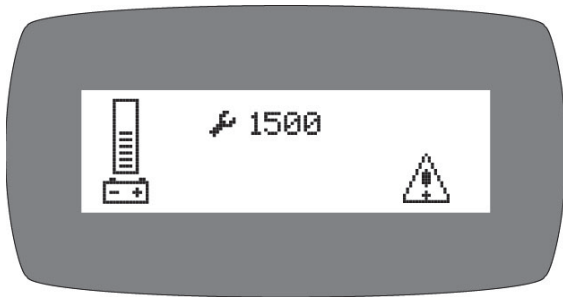


2. 1500 ERROR: There is an open in the parking brake circuit. Check the parking brake wiring and the parking brake coil to find the open circuit.

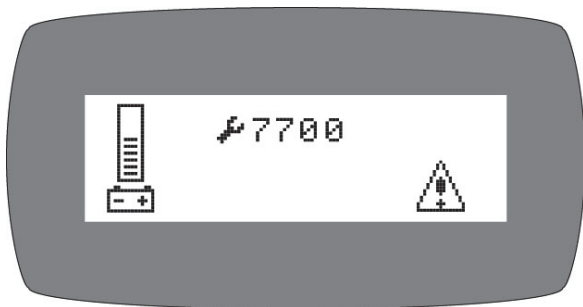


3. 770, 7701, 7702, and 7703 ERROR: The vacuum motor has exceeded their authorized power limits. Turn *OFF* Key and turn *ON* again to clear.

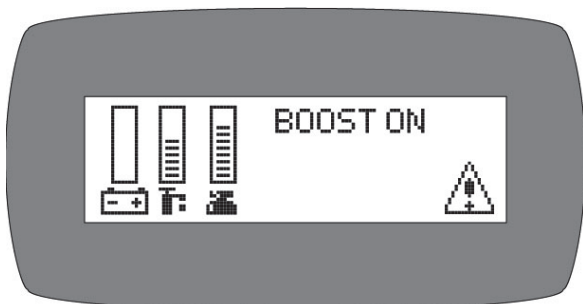


4. BOOST ON: Allows front wheel drive to draw more power when needed to climb ramps for 30 seconds.

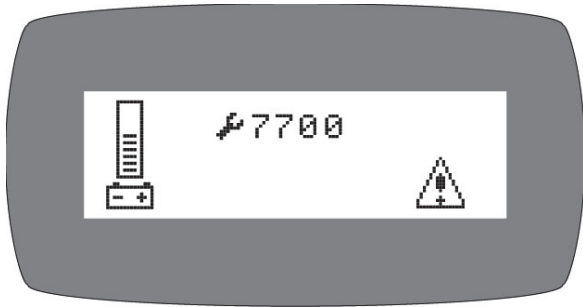


5. 7700: Vacuum Motor circuit is open.

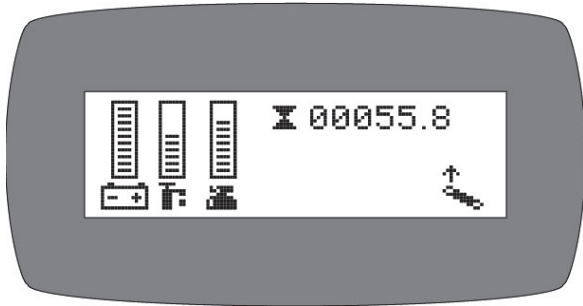

6. Throttle ERROR: You pressed the foot pedal before turning on the key. Turn *OFF* the key and try again, leaving foot off of the pedal.

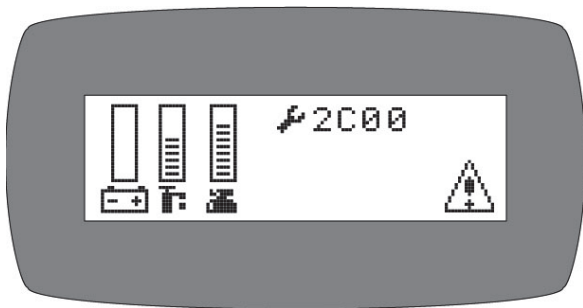

7. 2C00 and 2C01 ERROR: Low voltage warning. Voltage has dropped down below the minimum required to operate the machine. If you wait a few minutes, the Batteries may come up in voltage, allowing you to drive very slowly to the recharge station. If not, you will have to release the parking brake (on the front wheel, pull lever toward the front of the machine to release) and push the machine to recharging station. You must disconnect the traction motor! (+ cable first)

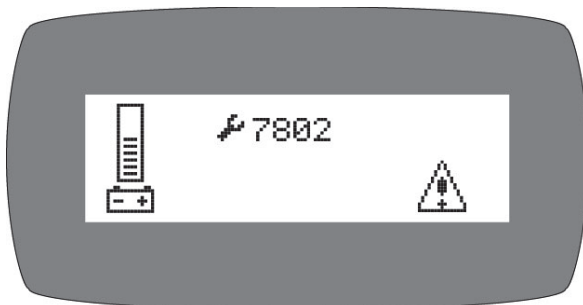

8. 7802 ERROR: The traction motor pulled excessive current perhaps running a ramp for more than the 60 seconds allowing for this. Turn *OFF* the Key, turn on again, and continue. You should not use this machine to climb ramps so steep and so long that this code comes up repeatedly, or you could overheat the traction motor.

9. All other ERROR codes: Turn *OFF* the Key, and disconnect the positive battery cable from the Batteries for more than one minute (*the time is needed to drain the controller on-board capacitor*). Reconnect cables, being sure that it is tight. ***Too loose and you will burn Battery. If you over tighten the cables you can damage the Battery lead terminal. Try again.***

10. If the problems cannot be solved by any of this solution, call your local dealer service department.

MACHINE SPECS

BODY CONSTRUCTION/DIMENSIONS

TANK MATERIAL:
CHASSIS CONSTRUCTION:
FRONT WHEELS:
REAR CASTERS:
SIZE (L x W x H):
WEIGHT (WITHOUT BATTERIES):
WEIGHT (WITH BATTERIES):

MAGNUM

POLY (7/16") (1.11 cm)
3/16" STEEL (.2 cm)
(2x) 12" x 3.5" [(2x) 30.5 x 8.9 cm]
(2x) 5" x 2" [(2x) 12.7 x 5 cm]
56" x 24" x 43" (142 x 61 x 109 cm)
494 LB.
886 LB.

SCRUBDECK SYSTEM

DISK BRUSH SIZE:

DISK SCRUBDECK MOTOR:
OPTIONAL SCRUBDECK MOTOR:
CYLINDRICAL BRUSH SIZE:

CYLINDRICAL BRUSH SPEED:
CYLINDRICAL SCRUBDECK MOTOR:
HD CYLINDRICAL SCRUBDECK MOTOR:
NOTE: HD Option is Standard on 30"/34" Cylindrical Decks
EDGE PAD SIZE:

EDGE SCRUBDECK MOTOR:
OPTIONAL EDGE SCRUBDECK MOTOR:
SCRUBDECK DOWN PRESSURE:

26-D: (2x) 13" (56 cm)
30-D: (2x) 15" (38 cm)
34-D: (2x) 17" (43 cm)
(1x) .75 HP (559 watts) / 200 RPM
(1x) 1 HP (746 watts) / 350 RPM
24-C: (2x) 22" (55.8 cm)
27-C: (2x) 25" (63.5 cm)
30-C: (2x) 28" (71 cm)
34-C: (2x) 32" (81 cm)
750 RPM
(2x) .75 HP (559 watts) / 350 RPM
(2x) 1.0 HP (746 watts) / 350 RPM
28-E: (1x) 28"x14"
32-E: (1x) 32"x14"
(1x) 1.0 HP (746 watts) / 2500 RPM
(1x) 1.2 HP (746 watts) / 2900 RPM
0-250 LB (0-113 kg)

SOLUTION SYSTEM

SOL. TANK CAPACITY:
SOLUTION FLOW RATE:
SOLUTION FILTER:

30 GAL (113 liters)
0 - 0.75 GPM (0 - 4 lpm)
STAINLESS / INLINE

RECOVERY SYSTEM

REC. TANK CAPACITY:
VACUUM POWER:
DRAIN HOSE:
VACUUM SPECS (LIFT / AIRFLOW):
DEMISTING CHAMBER:
DRAIN SAVER:

30 GAL (113 liters)
0.8 HP (559 watts)
1.5" DIAMETER (4 cm)
68" / 72 cfm (172 cm / 21cmm)
1.25 GAL (5 liters)
60 in³ (152 cm³)

BATTERY SYSTEM

SYSTEM VOLTAGE:
STANDARD BATTERY AH RATING:
OPTIONAL BATTERY AH RATING:
BATTERY RUN TIME (STANDARD):
CHARGER (AUTOMATIC):

24 VOLTS
(4x) 245 AH
UP TO (4x) 420 AH
UP TO 5 HRS.
25 AMP

DRIVE SYSTEM

STANDARD DRIVE:

FORWARD SPEED:
REVERSE SPEED:

0.75 hp (559 watts), ALL GEAR/
SEALED
0-230 FT/MIN (4 mph) (6 kph)
0-125 FT/MIN (2 mph) (3 kph)

PRODUCTIVITY

SCRUBBING WIDTH:
SCRUBBING RATE/HOUR :

24", 26", 27", 28", 30", 32", 34"
26,400 - 37,400 FT/HR

COMMON WEAR PARTS

ROUND DISK BRUSHES:

| BRUSHES | MODEL 26" DISK | MODEL 28" DISK | MODEL 30" DISK | MODEL 34" DISK |
|----------------|-------------------|-------------------|-------------------|-------------------|
| Super Grit | 13-421SS | 14-421SS | 15-421SS | 17-421SS |
| Tough Grit | 13-421S | 14-421S | 15-421S | 17-421S |
| Midi Grit | 13-421C | 14-421C | 15-421C | 17-421C |
| Light Grit | 13-421PS | 14-421PS | 15-421PS | 17-421PS |
| Poly (.028) | 13-421P | 14-421P | 15-421P | 17-421P |
| Nylon (.016) | 13-421N | 14-421N | 15-421N | 17-421N |
| Tampico | 13-421T | 14-421T | 15-421T | 17-421T |
| Pad Driver | 13-421D | 14-421D | 15-421D | 17-421D |
| Diamond Driver | 13-421DD | 14-421DD | 15-421DD | 17-421DD |

ROUND DISK PADS:

NOTICE

The ## in Disk Column Denotes Desk Pad Size: 13", 15" or 17"

| DISK PADS | DISK | LEVEL | COLOR |
|-------------|----------|-----------|-------|
| Super Black | ##-422BB | Very High | Black |
| Black | ##-422B | High | Black |
| Brown | ##-422BR | High | Brown |
| Green | ##-422G | Medium | Green |
| Blue | ##-422BL | Moderate | Blue |
| Red | ##-422R | Moderate | Red |
| White | ##-422W | Light | White |

EDGE PADS AND SCREENS:

| DESCRIPTION | 28"×14" | 32"×14" |
|--------------------------|-----------|-----------|
| | SCRUBDECK | SCRUBDECK |
| White Pad | EDGE-4054 | EDGE-5005 |
| Red Pad | EDGE-4053 | EDGE-5004 |
| Blue Pad | EDGE-4052 | EDGE-5009 |
| Green Pad | EDGE-4051 | EDGE-5002 |
| Black Pad | EDGE-4050 | EDGE-5001 |
| White Driver Pad | EDGE-4058 | N / A |
| 60 Grit Sand Screen | EDGE-4059 | N / A |
| 80 Grit Sand Screen | EDGE-4060 | N / A |
| 100 Grit Sand Screen | EDGE-4061 | EDGE-5028 |
| 120 Grit Sand Screen | EDGE-4062 | EDGE-5029 |
| 150 Grit Sand Screen | EDGE-4063 | N / A |
| Tile/Grout Renovator Pad | EDGE-4048 | N / A |
| Dominator HD Strip Pad | EDGE-4055 | N / A |
| Maroon ECO Prep Pad | EDGE-4056 | EDGE-5007 |

| | | |
|------------------------|-----------|-----------|
| Remover Burnishing Pad | EDGE-4057 | EDGE-5008 |
| Porko Burnishing Pad | EDGE-4047 | N / A |
| Velcro Pad | 300-4024 | N / A |

NEW STYLE CYLINDRICAL BRUSHES:

For Machine Serial #50000 & Greater

| BRUSHES | MODEL 24" CYLINDRICAL | MODEL 27" CYLINDRICAL | MODEL 30" CYLINDRICAL | MODEL 34" CYLINDRICAL |
|----------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Super Grit | N / A | N / A | N / A | N / A |
| Tough Grit | 225-821S | 255-821S | 285-821S | 325-821S |
| Midi Grit | 225-821C | 255-821C | 285-821C | 325-821C |
| Light Grit | 225-821PS | 255-821PS | 285-821PS | 325-821PS |
| Poly (.028) | N / A | N / A | N / A | N / A |
| Nylon (.016) | 225-821N | 255-821N | 285-821N | 325-821N |

OLD STYLE CYLINDRICAL BRUSHES:

For Machines Prior To Serial #50000

| BRUSHES | MODEL 24" CYLINDRICAL | MODEL 27" CYLINDRICAL | MODEL 30" CYLINDRICAL | MODEL 34" CYLINDRICAL |
|----------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Super Grit | N / A | N / A | N / A | N / A |
| Tough Grit | 22-521S | 25-521S | 28-521S | 32-521S |
| Midi Grit | 22-521C | 25-521C | 28-521C | 32-521C |
| Light Grit | 22-521PS | 25-521PS | 28-521PS | 32-521PS |
| Poly (.028) | N / A | N / A | N / A | N / A |
| Nylon (.016) | 22-521N | 25-521N | 28-521N | 32-521N |

SQUEEGEE BLADE KITS & COMPLETE SQUEEGEE ASSEMBLIES:

| SQUEEGEE SIZE | 24" - 28" DECKS | 30" - 34" DECKS | GUM RUBBER BLADE KIT | LINATEX BLADE KIT | COMPLETE SQUEEGEE ASSEMBLIES |
|--------------------------|----------------------------|----------------------------|---------------------------------|------------------------------|---|
| 32" Squeegee | Optional | Optional | 22-770G | 22-770L | 23-7180 |
| 35" Squeegee | Standard | Optional | 25-770G | 25-770L | 25-7180 |
| 38" Squeegee | Optional | Standard | 28-770G | 28-770L | 28-7180 |

NOTICE

Squeegee blade kits include (1) Rear Blade, (1) Front Blade, and (2) Backup Wheels with hardware.

NOTICE

Squeegee Assemblies (complete) listed above all come with Linatex blades.

NOTICE

Size is stamped into the top of the painted steel squeegee body on all squeegee's.

NOTICE

The 32" squeegee is designed for narrow aisles and may not have the same water control around tight turns as the large squeegees.



Industrial • Commercial • Environmentally Safe

TRADITIONAL DRUMS / TOTES



DEMO / RENTAL QUARTS



WALL-MOUNTED SUPERCON



ONBOARD AUTO DISPENSING



Onboard
Availability

FORMULAS

SUDS
Approved



707 Citrus Green An environmentally cleaner that works! It is a solvent free degreaser that works on oil, carbon, even rubber marks. Incorporates the latest technology in "Green Cleaning".

SUDS
Approved



733 Low pH Safe on most surfaces not harmed by water alone. Low scale formula to prevent alkali buildup in cleaning equipment, while offer detergent to emulsify oil.

SUDS
Approved



755 High Power Ideal solvent fortified degreaser. This butyl based detergent is penetrating, fast acting, and deep cleaning with built-in corrosion inhibitors. It is our most effective degreaser.

SUDS
Approved



757 Gloss A high gloss detergent designed to dry to a bright shine. It is ideal for use on finished surfaces, tile, epoxy, or enamel. The special formula removes salt residue, scuff marks and dirt, while leaving no residue behind. The result is a clean, non-slip surface, ready for immediate use.

SUDS
Approved



797 HD The Heavy Duty concentrate is a Super alkaline detergent, formulated for heavy soil, grease, and thick buildup. Popular in machine shops, auto and truck repair, and other facilities with oil, hydraulic fluids and cutting oils.

***Below Sold in bulk concentrate only. Not available as a SuperCon, PowerDose or SUDS product.*

727 Pretreat** Designed to quickly remove tire marks, oil stains and buildup that has accumulated. This pretreat uses the powerful cleaning of natural citrus extract and is intended to be used directly on the floor at 100% concentrate.

744 Tough Stuff** Ideal for applications with Hard Water problems. It is safe to use in pressure washers and automatic scrubbers. The formulation enhances soil suspension, digests oil and grease, while supporting extra water conditioner.

PowerCat
P.O. Box 503
Racine, WI 53404-0503
Phone: 414-745-9337
Fax: 262-632-1630
www.powercatsolutions.com

Distributed by:

PowerCat, LLC, 2008.

STANDARD WARRANTY POLICY

RPS Corporation warrants its machines, parts and accessories to be free of manufacturer's defects for the periods specified below. Warranty will be granted at the sole discretion of RPS Corporation and is subject to final claim and parts review by R.P.S. Corporation and its vendors. This policy is effective January 1, 2013 and is subject to change on production units at a future date.

COVERAGE, EXCLUSIONS AND LIMITATIONS:

Coverage: All Models sold (Except Floor Machines: 1 Year Parts / 6 Months Labor / No Travel)

Parts: 36 months / 1,500 hours on "Power On" hour meter

Labor: 12 months

Travel: 3 months (150 mile maximum)

Poly Tanks: 7 Years (Water must not exceed 135°F/57°C) / 3,000 Hours

OEM Parts: 90 Day New Part Warranty

Validity: Fully completed Machine Delivery Form (online or fax) is on record at RPS and machine is serviced by Factory Authorized Personnel.

Limitation: Warranty will begin on date of machine installation to end-user or 6 months after shipment from RPS Corp. to the distributor if unsold at that time.

This warranty includes all parts on the machine except normal wear parts. Some of these exceptions are:

- EDGE / ORBITZ isolators (250 hours on average)
- Squeegee Blades, Wiper Blades, Skirts and Curtains.
- Caster Wheels, Squeegee Wheels and Bumpers.
- Lights (Strobe, Headlights, or Bulbs).
- Chains and Belts.
- Filters, Screens, and Vacuum Bags.
- Motor Brushes and commutator wear.
- Brooms, Brushes, Pads and Pad Retainers.
- Hoses and Tubing.
- Drive Tires, Pneumatic Wheels and Tubes.
- Rubber Floor Seals and Gaskets.
- Vacuum motors with evidence of moisture or debris intrusion or > 400 hours.
- The Batteries (see below).
- **NOT COVERED:** Routine maintenance, adjustments or parts damaged from abuse, neglect, improper use of the machine, or lack of scheduled "daily, weekly, monthly" maintenance in accordance with our published PM Sheets.

POLY TANKS: 7 Years Coverage against leakage due to manufacturer's defect in materials or workmanship. Tank warranty void if water used exceeds 135°F/57°C

NOTE: Freight coverage for 3 Years under the parts section of warranty.

BATTERIES: Warranted through battery manufacturer for **One (1) Year** (pro-rated) from the date of delivery. The battery manufacturer approves or denies the warranty coverage after analysis. We rely on solely on their review.

NOTE NOT COVERED: Damage from lack of water, failure to use OEM charger, or non-distilled water. Battery terminals – Battery terminals and cable connections are covered for 30 days from the shipment of the machine. (Battery terminals tightness should be inspected every 30 days.)

MACHINE INSTALL / WARRANTY REGISTRATION

Installing Dealer: _____ **Installed By:** _____

Location: (City, State): _____ **Install Date:** _____

End-User Company Name: _____ **End-User Contact:** _____

Address: _____ **City/State:** _____ **Zip:** _____

Phone: _____ **Fax:** _____ **Email:** _____

Model: _____ **Serial #:** _____ **Hour Meter:** _____

BUYER'S REPRESENTATIVE HAS RECEIVED INSTRUCTION IN PROPER OPERATION OF THE FOLLOWING CONTROLS AND FEATURES:

SCRUBBERS:

- Filling solution tank, Solution tank sight tube, Solution drain hose or valve for flushing and freezing conditions
- Adjusting controls & operation, Double scrubbing, Squeegee lift delay, High Recovery RED Light, vacuum switch (horn honking) and vacuum timer
- Recovery tank draining & cleaning, Common Squeegee hose clog points, vacuum screen removal and cleaning, drain saver basket emptied.
- Shroud and pad/brush removal and installation
- Side Wiper and Curtain adjustment and maintenance for water control
- Solution valve and filter operation (removal and cleaning)
- LCD display operation, 4 hour meters (key switch, brush, traction drive, vacuum)
- Tank tilt back feature, only when both tanks are fully drained
- Squeegee hose removal and checking for clogs

BURNISHERS

- Train and have customer demonstrate proper removal and replacement of burnishing pad
- Pad pressure gauge and proper operating range to avoid tripping the circuit breaker

SWEEPERS

- Demonstrate proper removal and replacement of main broom and side brooms
- Method for cleaning the dust filter, emptying out the debris hopper and correct installation
- Correct operation of the main broom and side broom levers, and understands to park with brushes in UP position
- Trained on the "Wet-Sweep" bypass door and not to operate through standing water

EDGE MACHINES

- EDGE scrubbers must have their isolators & deck hour meter replaced every 250 hours of use.
- Customer understands the Grip Face is not warranted against damage from improper use or direct contact with the floor.

ALL MACHINES

- Checking for proper battery electrolyte level, electrolyte condition monthly, and check that battery terminals are properly torqued to 10ft/lbs.
- Parking brake override
- Charging operation and customer understands batteries have limited "cycles" and recharging = 1 cycle
- Seat and steering wheel adjustment
- Customer has read and understands the list of WARNINGS/CAUTIONS in the Operator manual
- Battery and Machine Maintenance Guide posters hung up and reviewed
- Manufacturer's website is a good source of information (Videos, PM Sheets) and sign up for quarterly newsletters
- Operators and Parts manuals were delivered, reviewed, understood, and confirmation preventive maintenance is done every 100 hours of use and recorded on PM Sheets provided online or in manuals.

Installed By (print) _____ **Signature** _____

Buyers Representative (print) _____ **Signature** _____

Buyer agrees to pay for any repairs, adjustments, or secondary training that manufacturer determines is excluded from the warranty.

Complete and Fax form to 1-866-632-6961 or Online at www.rpsccorporation.com



1711 South Street
Racine, WI 53404
www.rpscorporation.com
www.factorycat.com
www.tomcatequip.com
Tel. US: 800-634-4060
Tel. Int: (011) 262-681-3583
Fax: 866-901-3335